Acer AL1715

Service Guide

Service guide files and updates are available on the CSD web: for more information,
Please refer to http://csd.acer.com.tw/

Copyright

Copyright © 2003 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

The information in this guide is subject to change without notice. Acer Incorporated makes no representations or warranties, either expresses or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose, Any Acer Incorporated software described in this manual is sold or licensed “as is ”. Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, of its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Corporation.
Intel is a registered trademark of Intel Corporation.
Pentium and Pentium II/III are trademarks of Intel Corporation.
Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Conventions

The following conventions are used in this manual:

Screen messages	Denotes actual messages that appear on screen
Note	Gives bits and pieces of additional information related to the current topic.
Warning	Alerts you to any damage that might result from doing or not doing specific actions.
Caution	Gives precautionary measures to avoid possible hardware or software problems.
Important	Reminds you to do specific actions relevant to the accomplishment of procedures.

Preface

Before using this information and the product it supports, please read the following general information.

1. this Service Guide provides you with all technical information relating to the BASICCONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. please not WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide, for ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and Service of customer machines.

WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

Which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Warning

Use only shielded signal cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the party responsible for comliance could viold your authority to operate the equipment.

As an ENERGY STAR® Partner our company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

WARNING:

To prevent fire or chock hazard, do not expose the monitor to rain or moisture. Dangerously high voltages are present inside the monitor. Do not open the cabinet. Refer servicing to qualified personnel only.

PRECAUTIONS

- Do not use the monitor near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, Swimming pool or in a wet basement.

- Do not place the monitor on an unstable trolley, stand, or table. If the monitor falls, it can injure a person and cause serious damage to the appliance. Use only a trolley or stand recommended by the manufacture or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacture and follow the kit instructions.
- Slots and openings in the back and bottom of the cabinet area provided for ventilation. To ensure reliable operation of the monitor and to protect it from overheating, be sure these openings are not blocked or covered. Do not place the monitor on a bed, sofa, rug or similar surface. Do not place the monitor near or over a radiator or heat register. Do not place the monitor in a bookcase or cabinet unless proper ventilation is provided.
- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.
- Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- Never push any object into the slot on the monitor cabinet. It could short circuit parts causing a fire or electric shock. Never spill liquids on the monitor.
- Do not attempt to service the monitor yourself; opening or removing covers can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel.
- To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100-240V AC, Min. 3.5A.
- The wall socket shall be installed near the equipment and shall be easily accessible.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitor and do not indicate a problem.

NOTES

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness in the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.

Table of contents

Chapter 1 Monitor Feature 8
Chapter 2 Operating Instruction 22
Chapter 3 Machine Disassembly and Replacement 30
Chapter 4 Troubleshooting 40
Chapter 5 Connector Information 44
Chapter 6 FRU List 45
Chapter 7 Schematic Diagram 65

Chapter 1

Monitor Feature

INTRODUCTION

Scope

This specification defines the requirements for the 17” MICRO-PROCESSOR based Multi-mode supported high resolution color LCD monitor. This monitor can be directly connected to general 15 pin D-sub VGA connector and eliminates the requirement of optional special display card. It also supports VESA DPMS power management and plug & play function. There is a build-in stereo audio amplifier with volume control to drive a pair of speakers.

Description

The LCD monitor is designed with the latest LCD technology to provide a performance oriented product with no radiation. This will alleviate the growing health concerns. It is also a space saving design, allowing more desktop space, and comparing to the traditional CRT monitor, it consumes less power and gets less weight in addition MTBF target is 20k hours or more.

Comparison Chart of AR577/578

	AR577	AR578
Panel	Normal 17” panel HYDIS HT17E12-200	Normal 17” panel HYDIS HT17E12-200
Signal Interface	DSUB	DSUB
Sync Type for analog input	Separate / compatible /	Separate / compatible /
Color Temp user adjust	Support	Support
DDC	DDC2B	DDC2B
Speaker	0.5W+0.5W	NO
Headphone Jack	NO	NO
Microphone Jack	No	No
USB Hub	Not support	Not support
Tilt / Swivel	Yes / No	Yes / No
Height Adjust	Option	Option

ELECTRICAL REQUIREMENTS

Standard Test Conditions

All tests shall be performed under the following conditions, unless otherwise specified.

Ambient light :	225 lux
Viewing distance :	50 cm in front of LCD panel
Warrn up time	
All specifications :	30 minutes
Fully functional :	5 seconds
Measuring Equipment :	Chroma 2250 signal generator or equivalent, directly
	Connected to the monitor under test.
	Minolta CA100 photometer, or equivalent
Control settings	
User brightness control :	Maximum (unless otherwise specified)
User contrast control:	Typical (unless otherwise specified)
User red/white balance,	
Green/white balance and	
Blue/white balance control :	In the center (unless otherwise specified)
Power input:	110Vac or 230Vac
Ambient temperature:	20 ± 5 ˚C (68 ± 9 ˚ F)
Analog input mode:	1280 x1024 /60 Hz

MEASUREMENT SYSTEMS

The units of measure stated in this document are listed below:

1 gamma = 1 nano tesla

1 tesla = 10,000 gauss

cm = in x 2.54

lb = kg x 2.2

degrees F = [°C x 1.8] + 32

degrees C = [°F - 32]/1.8

u' = 4x/(-2x + 12y + 3)

v' = 9y/(-2x + 12y + 3)

x = (27u'/4)/[(9u'/2) - 12v' + 9]

y = (3v')/[(9u'/2) - 12v' + 9]

nits = cd/(m^2) = Ft-L x 3.426

lux = foot-candle x 10.76

LCD monitor General specification

Panel Type:	17 “ active matrix color TFT LCD
	1). Hydis HT17E12-200
Display size:	37.92mm (H) × 270.34mm(V)
Display mode:	VGA 720 × 400 (70 Hz)
	VGA 640 × 480 (60/66/70/72/75 Hz)
	SVGA 800 × 600 (60/70/72/75 Hz)
	XGA 1024 × 768 (60/70/75 Hz)
	SXGA 1280 × 1024 (60/70/75 Hz) standard resolution
Pixel pitch:	0.264mm(H) × 0.264mm(V)
Display Dot:	1280 x (RGB) × 1024
Pixel Clock:	25.2 – 135.0MHz
Contrast ratio: θ = 0˚	HYDIS 430:1
Brightness:	HYDIS:250
Response time (Tr/Tf):	HYDIS(20)
Display color:	16.2M(6 bit color+FRC)
Viewing angle:	HYDIS L / R ≧ 80 / ≧ 80 (≧ 160 degrees horizontal typical)
	U / D ≧ 65 / ≧ 65 (≧ 130 degrees vertical typical)
Luminance Uniformity:	> 75 % (typical)
Pc interface:	1).Video: RGB analog 0.7V peak to peak
	Sync: TTL positive or negative
Signal connector:	15 pin Mini D type, (standard VGA video)
	3.5 mm stereo audio jack (Audio) (For AR577 only)
Audio power:	0.5Wrms + 0.5Wrms (300Hz – 10kHz (S.P.L. – 10 dB))(AR577 only)
Front control:	power on/off with LED select adjustment (+,-)
Interface frequency	
Horizontal Frequency	24KHz --80KHz
Vertical Frequency	49Hz ------75Hz
Plug & play:	Support VESA DDC2B functions
Power Input voltage:	Single phase, 50/60HZ, 100 VAC to 240VAC ±10%
Total output power:	60 Watt max.

LCD Panel Specification

LCD Panel Model (Hydis LT17E12-200)

- Display Type — active matrix color TFT LCD
- Resolution — 1280x1024 pixels
- Display Dot — 1280x (RGB) x 1024
- Display Area — 337.92mm(H) x 270.34mm(V)
- Pixel Pitch — 0.264mm(H) x 0.264mm(V)
- Display Color — 16M (6 bite color+FRC)
- Lamp Voltage — 700 Vrms (typ)
- Lamp Current — 6.5 mArms (typ)
- Weight — 1900g (typ)
- Optical Specifications

I_L = 6.5mA (RMS) Ta = 25 ± 2°C V_{DD} = 5V F_V = 60Hz F_{DCLK} = 54MHz

ITEM		Symbol	Condition	MIN.	TYP.	MAX.	UNIT
Contrast Ratio (Center of screen)		CR	ϕ=0, θ=0 Normal Viewing Angle	350	430	-	
Response Time at Ta	Rising	T_R		-	20	-	(total) msec
	Falling	T_F					
Luminance of white (Center of screen)		Y_L		200	250	-	cd/m^2
Color Chromaticity (CIE)	Red	R_X		0.603	0.633	0.663	
		R_Y		0.324	0.354	0.384	
	Green	G_X		0.262	0.292	0.322	
		G_Y		0.568	0.598	0.628	
	Blue	B_X		0.115	0.145	0.175	
		B_Y		0.077	0.107	0.137	
	White	W_X		0.275	0.305	0.335	
		W_Y		0.308	0.338	0.368	
Viewing Angle	Hori.	θ_L	CR≥10	-	80	-	Degrees
		θ_R		-	80	-	
	Vert.	ϕ_H		-	65	-	
		ϕ_L		-	65	-	
Brightness Uniformity		B_{UNI}		-	-	1.2	
Flicker		F		-	-	5	%
Cross talk		C_T		-	-	2.0	%

Panel Relative Humidity

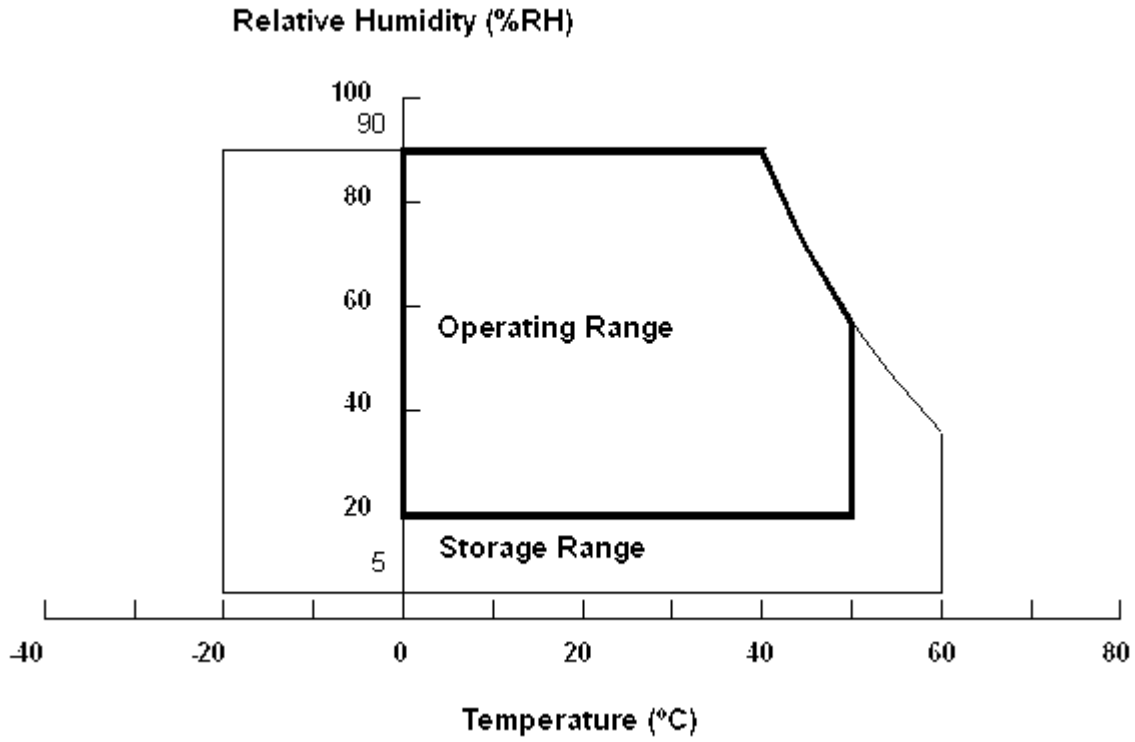

Input Signals

Video input

- Type Analog R, G, B.
- Input Impedance 75 ohm +/- 2%
- Polarity Positive
- Amplitude 0 - 0.7 +/- 0.05 Vp
- Display Color same as LCD panel

Sync input

- Signal separate horizontal and vertical sync, or composite sync which are TTL compatible
- Polarity positive and negative.

Interface frequency

The following frequency range is generalized by supported timing. If the entered mode does not match the supported timing the display optimization will not be assured.

- Horizontal Frequency 24KHz --80KHz
- Vertical Frequency 49Hz -------75Hz

Supported Timing

TIMING	FH(KHZ) FV(HZ)	SYNC POLARITY	TOTAL (DOT/LINE)	ACTIVE (DOT/LINE)	SYNC WIDTH (DOT/LINE)	FRONT PORCH (DOT/LINE)	BACK PORCH (DOT/LINE)	PIXEL FOREQ.(MHZ)
640x350	31.469	+	800	640	96	16	48	25.175
VGA-350	70.087	–	449	350	2	37	60	
640x400	24.83	–	848	640	64	64	80	21.05
NEC PC9801	56.42	–	440	400	8	7	25	
640x400	31.469	–	800	640	96	16	48	25.175
VGA-GRAPH	70.087	+	449	400	2	12	35	
640x400	31.5	–	800	640	64	16	80	25.197
NEC PC9821	70.15	–	449	400	2	13	34	
640X480	31.469	-	800	640	96	16	48	25.175
VESA-PAL	50.030	-	629	480	2	62	85	
640x480	31.469	–	800	640	96	16	48	25.175
VGA-480	59.94	–	525	480	2	10	33	
640x480	35.00	–	864	640	64	64	96	30.24
APPLE MAC-480	66.67	–	525	480	3	3	39	
640x480	37.861	–	832	640	40	16	120	31.5
VESA-480-72Hz	72.809	–	520	480	3	1	20	
640x480	37.5	–	840	640	64	16	120	31.5
VESA-480-75Hz	75	–	500	480	3	1	16	
720x400	31.469	–	900	720	108	18	54	28.322
VGA-400-TEXT	70.087	+	449	400	2	12	35	
832x624	49.725	–	1152	832	64	32	224	57.2832
APPLE MAC-800	74.55	–	667	624	3	1	39	
800x600	35.156	+	1024	800	72	24	128	36
SVGA	56.25	+	625	600	2	1	22	
800x600	37.879	+	1056	800	128	40	88	40
VESA-600-60Hz	60.317	+	628	600	4	1	23	
800x600	48.077	+	1040	800	120	56	64	50
VESA-600-72Hz	72.188	+	666	600	6	37	23	
800x600	46.875	+	1056	800	80	16	160	49.5
VESA-600-75Hz	75	+	625	600	3	1	21	
1024x768	48.363	–	1344	1024	136	24	160	65
XGA	60.004	–	806	768	6	3	29	
1024x768	53.964	+	1328	1024	176	16	112	71.664
COMPAQ-XGA	66.132	+	816	768	4	8	36	
1024x768	56.476	–	1328	1024	136	24	144	75
VESA-768-70Hz	70.069	–	806	768	6	3	29	
1024x768	60.023	+	1312	1024	96	16	176	78.75
VESA-768-75Hz	75.029	+	800	768	3	1	28	
1024x768	60.24	–	1328	1024	96	32	176	80
APPLE MAC-768	75.02	–	803	768	3	3	29	
1152x864	54.054	+	1480	1152	96	40	192	80
(60Hz)	59.270	+	912	864	3	13	32	
1152x864	63.851	+	1480	1152	96	32	200	94.499
(70Hz)	70.012	+	912	864	3	1	44	
1152x864	67.50	+	1600	1152	128	64	256	108.00
(75Hz)	75.00	+	900	864	2	2	32	
1280x960	60.00	+	1800	1280	112	96	312	108.00
(60Hz)	60.00	+	1000	960	3	1	36	
1280x960	70.00	+	1800	1280	112	96	312	126.00
(70Hz)	70.00	+	1000	960	3	1	36	
1280x960	75.00	+	1800	1280	112	96	312	135.00
(75Hz)	75.00	+	1000	960	3	1	36	
1280x1024	64	+	1688	1280	112	48	248	108
VESA-1024-60Hz	60	+	1066	1024	3	1	38	
1280x1024	80	+	1688	1280	144	16	248	135
VESA-1024-75Hz	75	+	1066	1024	3	1	38	

Note: Mode 640x350, 640x400 and 720x400 will locate on middle position but cannot be expanded to full screen on vertical direction.

Support Modes

There will be 28 total support modes to accommodate the above mode and other video modes within the frequency range of the monitor.

85Hz refresh rate Support

Monitor should display 85Hz refresh rate mode as emergency mode.

Monitor should display “Out of Range” warning menu at this mode.

Video input Connector

Analog Video input Connector: 15pins mini D-Sub

Table 2.4.5. Pin assignment for D-sub connector

PIN NO.	Separate Sync
1	RED VIDEO
2	GREEN VIDEO
3	BLUE VIDEO
4	GROUND
5	GROUND
6	RED GROUND
7	GREEN GROUND
8	BLUE GROUND
9	PC5V (+5V DDC)
10	CABLE DETECTION
11	GROUND
12	SDA
13	H.SYNC
14	V.SYNC
15	SCL

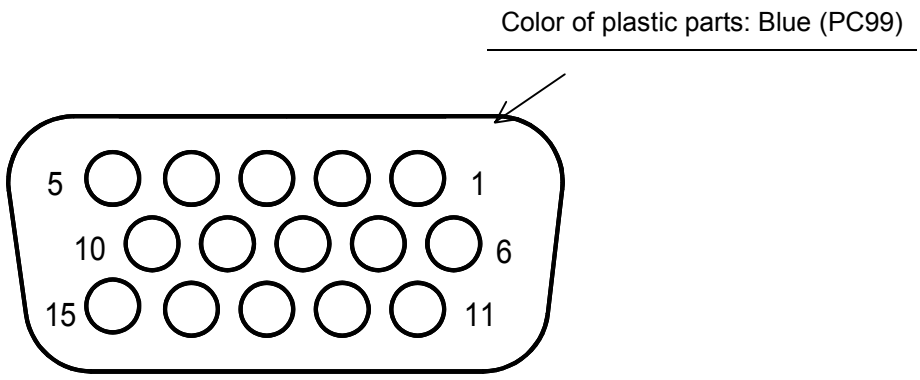

D-sub connector

Monitor Block Diagram

The LCD monitor will contain an main board, an inverter/ power board, key board and internal adapter which house the flat panel control logic, brightness control logic and DDC.

The inverter board will drive the backlight of panel and the DC-DC conversion.

The Adapter will provide thr 12V DC-power to inverter/ power board.

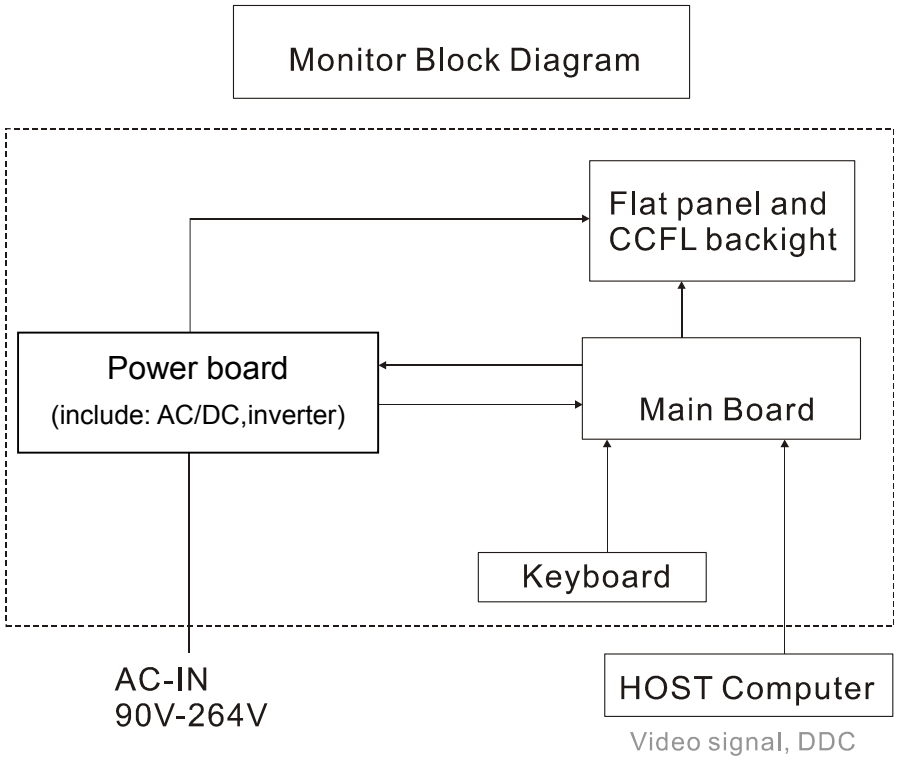

BLOCK DIAGRAM

System Block Diagram

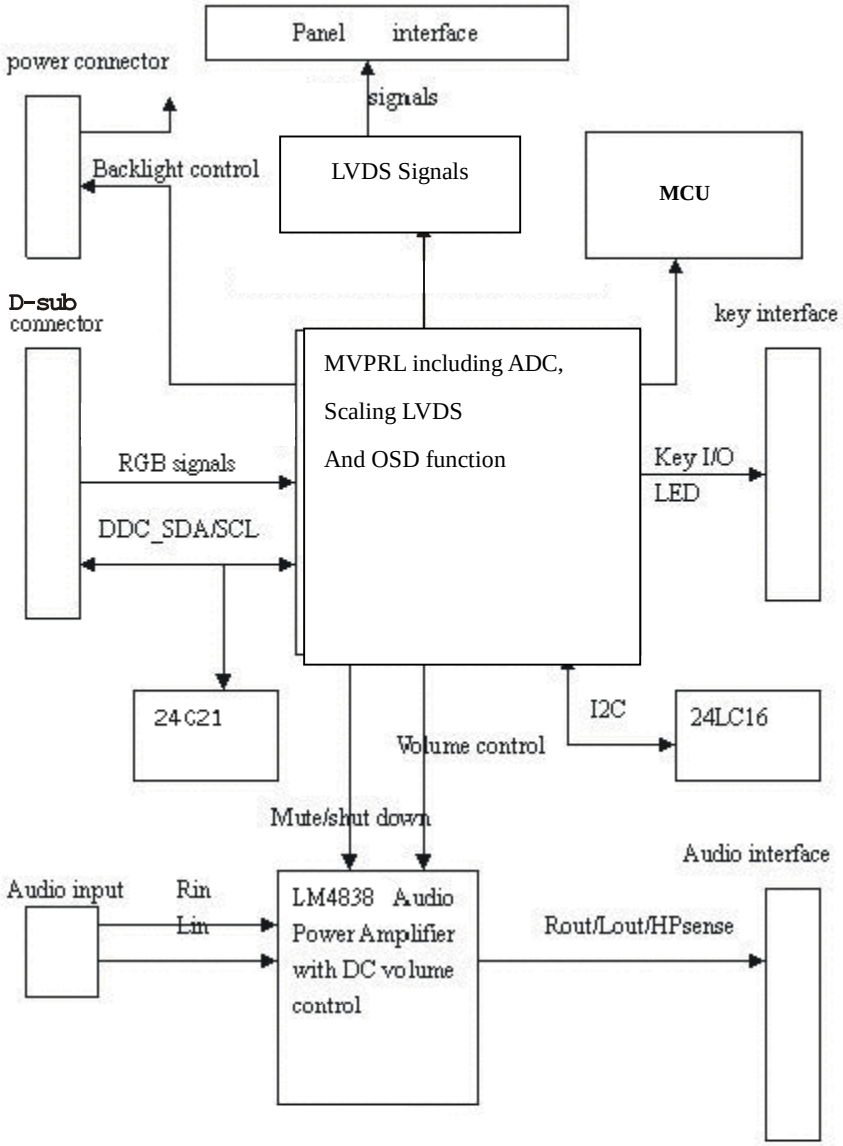

Monitor board layout

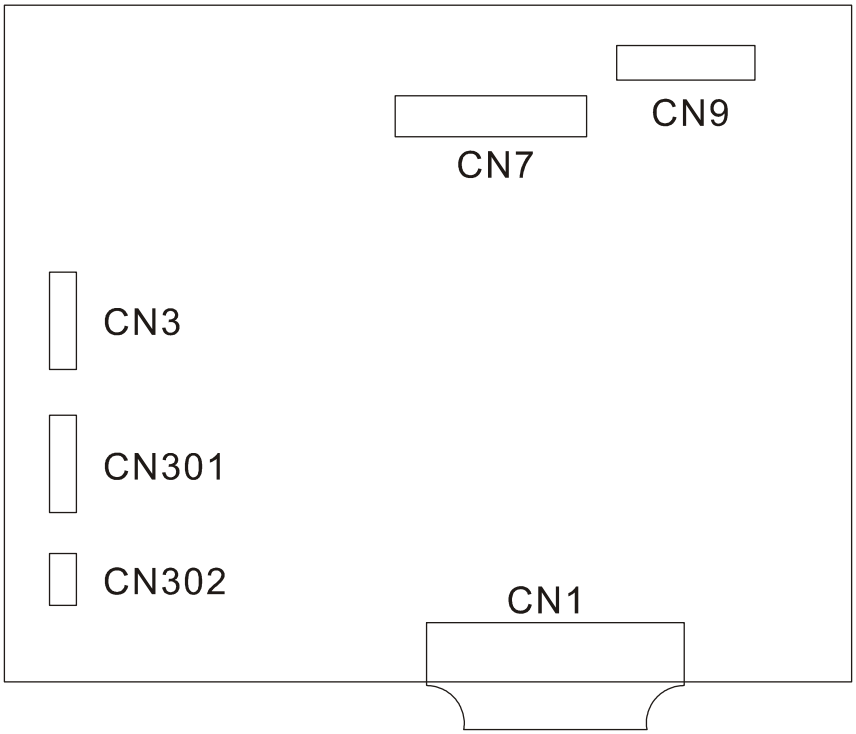

LABEL	Component	LABEL	Component
U1	74LVC14	CN1	D-SVB 15 PIN
U2	24LVC21	CN9	E&T 4501-10
U4	MVPRL	CN3	E&T 6113-08
U6	M8064I	CN301	E&T 4501-11
U5	24LC16B	CN302	E&T 4501-03
U7	MAX810	CN7	E&T DF14-30
U8	SI9435		
U9	LM4838		
U10	APL1085-3.3 CE		
U11	APL1117-2.5 VC		

Software flow chart

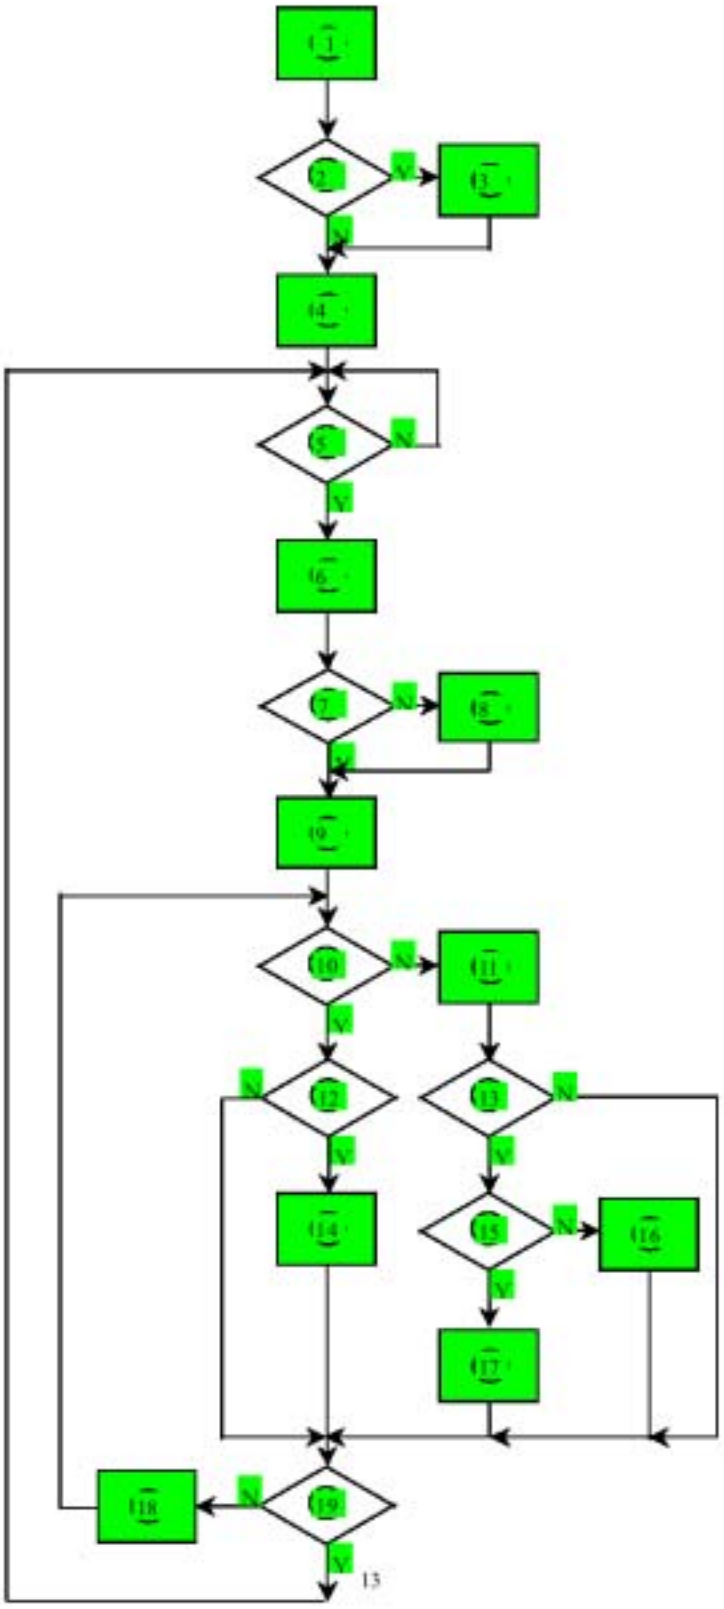

Software Flow Chart

1. MCU initialize
2. Is the eeprom blank?
3. Program the eeprom by default values.
4. Get the PWM value of brightness from eeprom.
5. Is the power key pressed?
6. Clear all global flags.
7. Are the “<” and “>” (Adjust key) and power key.
8. Enter factory mode
9. Save the power key status into eeprom.
   Turn on the LED and set it to green color.
   Scalar initialize.
10. In standby mode?
11. Update the lift time of back light.
12. Check the analog port, are there any signals coming?
13. Does the scalar send out a interrupt request?
14. Wake up the scalar
15. Are there any signal coming from analog port?
16. Display “Cable Not Connected” message, and go into standby mode after the message disappear.
17. Program the scalar to be able to show the coming mode.
18. Process the OSD display.
19. Read the key board. Is the power key pressed?

General Instructions

Press the power button to turn the monitor on or off. The other control buttons are located at front panel of the monitor. By changing these settings, the picture can be adjusted to your personal preferences.

- The power cord should be connected.
- Connect the video cable from the monitor to the video card.
- Press the power button to turn on the monitor position. The power indicator will light up.

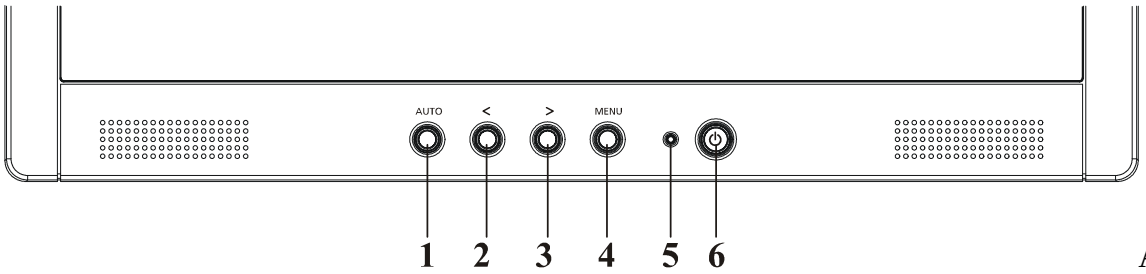

AR577

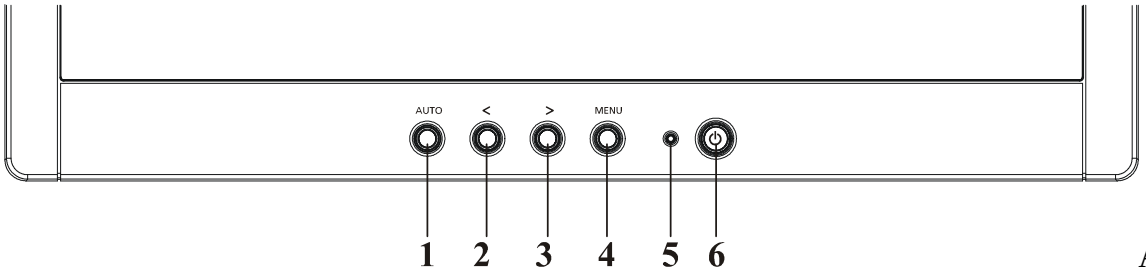

AR578

External Controls

1	Auto Adjust Key/Exit	4	MENU/ENTER
2	</ Volume	5	LED
3	>/ Volume	6	⏻ / Power Key

System Installation

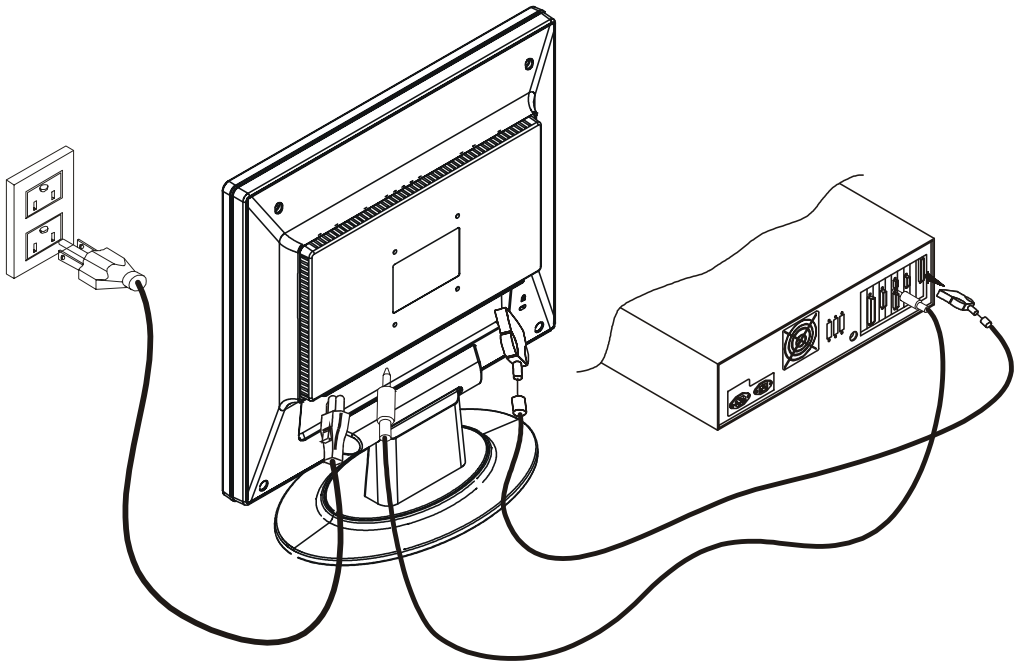

Connecting the Display

- Power off your computer.
- Connect one end of the signal cable to the LCD Monitor’s VGA port.
- Connect the other end of the signal cable to the VGA port on your PC.
- Make sure connections are secure.

Connecting the AC Power

- Connect the power cord to the LCD Monitor.
- Connect the power cord to an AC power source.

Connecting the Audio Cable (For AL1715 m and AL1715 bm)

- Connect the audio cable to the " LINE OUT " jack on your PC's audio card or to the front panel's “AUDIO OUT” jack of your CD ROM drive.
- Connect the other end of the audio cable to the LCD Monitor's " AUDIO IN " jack.

Chapter 2

Operating Instructions

CONTROLS

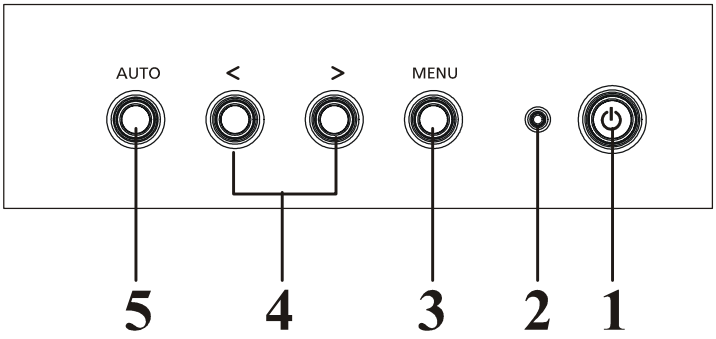

Control panel (monitor front panel)

1. Power ON/OFF switch, push to ON and push to OFF. (Toggle switch)
2. Power LED will be blue when monitor is on; be amber when in power saving mode.
3. Menu.
4. Adjust increase (Function select).

   Adjust decrease (Function select).
5. Auto adjustment Buttons.

Note:

1. Press button 4 (plus +) or (minus -) at the same time can activate “Volume Adjustment”.

2. When OSD Menu is off, press button 5 (auto) at the same time can activate “Auto Adjustment” immediately.

3. When into Factory mode press 4 (plus +),(minus -) and 1 (power) together 2 seconds at same time.

5. When into Burning mode press 5 (menus), 1 (power) together 2 second at same time.

Main OSD Menu:

Outline:

The description for control function :

Main Menu Icon	Sub Menu Item	Sub Menu Icon	Description	Adjustment Range	Reset Value
	Contrast		Contrast from Digital-register.	0-100	Recall Cool Contrast Value
	Brightness		Backlight Adjustment	0-100	Recall Cool Brightness Value
	Focus		Adjust Picture Phase to reduce Horizontal-Line noise	0-100	Do Auto Config
	Clock		Adjust picture Clock to reduce Vertical-Line noise.	0-100	Do Auto Config
	H. Position		Adjust the horizontal position of the picture.	0-100	Do Auto Config
	V. Position		Adjust the verticalposition of the picture.	0-100	Do Auto Config
	Warm	N/A	Recall Warm Color Temperature from EEPROM.	N/A	The Color Temperature will be set to Cool.
	Cool	N/A	Recall Cool Color Temperature from EEPROM.	N/A	

	User / Red		Red Gain from Digital-register.	0-100	100
	User / Green		Green Gain Digital-register.	0-100	100
	User / Blue		Blue Gain from Digital-register.	0-100	100
	English	N/A	Set OSD display language to English.	N/A	The Language will be set to English.
	繁體中文	N/A	Set OSD display language to Tranditional Chinese.	N/A	
	Deutsch	N/A	Set OSD display language to German.	N/A	
	Français	N/A	Set OSD display language to French.	N/A	
	Español	N/A	Set OSD display language to Spain.	N/A	
	Italiano	N/A	Set OSD display language to Italian.	N/A	
	简体中文	N/A	Set OSD display language to Simplified Chinese.	N/A	
	日本語	N/A	Set OSD display language to Japanese.	N/A	
	H. Position		Adjust the horizontal position of the OSD.	0-100	50
	V. Position		Adjust the verticalposition of the OSD.	0-100	50
	OSD Timeout		Adjust the OSD timeout.	10-120	10
	Auto Config	N/A	Auto Adjust the H/V Position, Focus and Clock of picture.	N/A	N/A
	Information	N/A	Show the resolution, H/V frequency and input port of current iput timing.	N/A	N/A
	Reset	N/A	Clear each old status of Auto-configuration and set the color temperature to Cool.	N/A	N/A
	Exit	N/A	Exit OSD	N/A	N/A

Hot-Key Menu:(For AR577 only)

Outline:

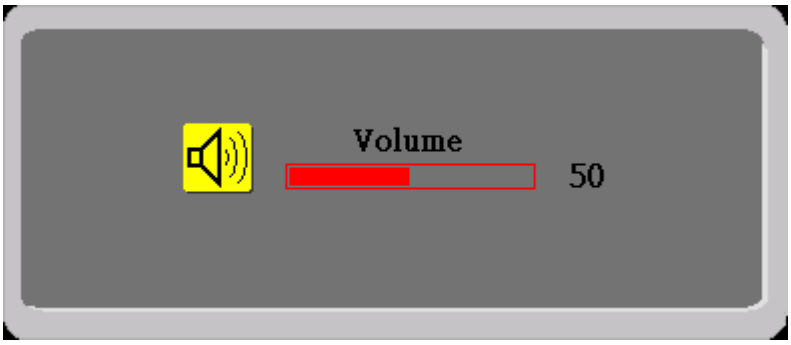

The description for Hot-Key function :

Item	Operation	Icon	Description	Adjustment Range	Reset Value
Volume	When the OSD is closed, press Left or Right button will be Volume Hot-Key Function		Volume of Audio adjustment. The Audio will be Mute when volume=0.	0-100	50

OSD Message:

Outline:

The description for OSD Message :

Item	Description
Auto Config Please Wait	When User Press Hot-Key “Auto”, will show this message, and the monitor do the auto config function.
Input Not Supported	When the Hsync Frequency, Vsync Frequency or Resolution is out of the monitor support range, will show this message. This message will be flying.
Cable Not Connected	When the video cable is not connected, will show this message. This message will be flying.
No Signal	When the video cable is connected, but the is no active signal input, will show this message, then enter power saving.

LOGO:

When the monitor is power on, the LOGO will be showed in the center.

Item of Factory menu

Vendor may customize design and add adjustment items Factory menu as far as all required items are included.

1) Bright

Adjust Brightness and Contrast value to Max.

2) Auto Balance

Adjust each R, G, B contrast (gain) and offset.

Method of auto adjust is depends on hardware.

Adjusted value of R, G, B gain shall be used for initial value of Contrast in user menu.

All value shall be adjustable manually.

This function shall be located in 3. tag of Factory menu.

3) Factory color temp data edit

Following data for color temp shall be editable manually.

-color temp default preset No.

Plug and play

Plug & play DDC2B feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities. The communication channel is defined in two levels, DDC2B.
The DDC2Bis a bidirectional data channel based on the I^2C protocol. The host can request EDID information over the DDC2B channel.

THIS MONITOR WILL APPEAR TO BE NON-FUNCTIONAL IF THERE IS NO VIDEO INPUT SIGNAL. IN ORDER FOR THIS MONITOR TO OPERATE PROPERLY, THERE MUST BE A VIDEO INPUT SIGNAL.

This monitor meets the Green monitor standards as set by the Video Electronics Standards Association(VESA) and/or the United States Environmental Protection Agency (EPA) and The Swedish Confederation Employees (NUTEK). This feature is designed to conserve electrical energy by reducing power consumption when there is no video-input signal present. When there is no video input signal this monitor, following a time-out period, will automatically switch to an OFF mode. This reduces the monitor's internal power supply consumption. After the video input signal is restored, full power is restored and the display is automatically redrawn. The appearance is similar to a "Screen Saver" feature except the display is completely off. The display is restored by pressing a key on the keyboard, or clicking the mouse.

Using The Right Power Cord

The accessory power cord for the Northern American region is the wallet plug with NEMA 5-15 style and is UL listed and CSA labeled. The voltage rating for the power cord shall be 125 volt AC.
Supplied with units intended for connection to power outlet of personal computer: Please use a cord set consisting of a minimum No. 18 AWG, type SJT or SVT three conductors flexible cord. One end terminates with a grounding type attachment plug, rated 10A, 250V,CEE-22 male configuration. The other end terminates with a molded-on type connector body, rated 10A, 250V, having standard CEE-22 female configuration.
Please note that power supply card needs to use VDE 0602, 0625, 0821 approval power cord in European counties.

White Color Temperature

White color temperature is 4 preset as 9300, 7500,6500 and User,

Default value of user color should be user which is maximum setting for panel.

Target of color setting

Color Temp.	Color Coordinate		Tolerance	Color Coordinate		Tolerance
	x	y		u'	v'	
9300K	0.283	0.297	±0.03	0.189	0.446	u'v' ≤ 0.01*
6500K	0.313	0.329	±0.03	0.198	0.469	u'v' ≤ 0.01*
User	-	-		-	-	-

*) TCO'0X A.2.6.1 requirement

User should follow "Microsoft Windows Color Quality Specification for Liquid Crystal Display OEM's".

(http://www.microsoft.com/hwdev/tech/color/ColorTest.asp)

Audio Technical specification (For AR577 only)

General Description:

Output power	:	1W + 1W maximum
Total harmonic distortion	:	Less than 1 % (except speakers distortion)
Input signal sensitivity	:	0.5 Vrms for full output
Input impedance	:	47 Kohm +/- 5 %
Frequency response range	:	20Hz – 20kHz (except speakers response)
Difference of L and R output	:	Less than 2 dB

Electrical characteristics (Tamb=25°)

Audio amplifier(USE Panasonic VP-7723A Audio Analyzor.)

Item	Audio Input	Freq.	Spec.			Comment
			Min.	Typ.	Max.	
Input Voltage(V)			-	0.5Vms	-	
Input Current(m A)			-	500	800	
Audio Voltage Gain	500m Vrms	1KHz	-	-	6 d B	Volume Max.,load 4 Ω
Frequency Response	500m Vrms	300Hz-20KHz	-10dB	-	+10d B	Volume Max.,load 4 Ω
Signal to Noise ratio	500m Vrms	1KHz	-	-	-40dB	Volume Max.,load 4 Ω
Total harmonic distortion	500m Vrms	1KHz			1%	except speakers distortion
Cross talk	500m Vrms	1KHz	-	-	-30dB	Volume Max.,load 4 Ω
Output Watt.	500m Vrms	1KHz	-	-	0.5W	Volume Max.,load 4 Ω
Volume Control			-	-	-	Analog

Speakers

Maximum power	:	2 W per speaker(max)
Impedance	:	4 ohm +/- 15 % @ 1kHz 1.0Hz
Frequency response range	:	300 Hz – 20 kHz (S.P.L. – 10 dB)
Total harmonic distortion	:	Less than 5 % @ 0.125 W 1kHz

Chapter 3

Machine Disassembly and Replacement

The step between front bezel and back cover shall be within specification.

Top and Bottom

Back cover & Bezel concavity

0.8mm ≤ A ≤ 1.3 mm

Left and Right

Back cover & Bezel concavity

0.8mm ≤ A ≤ 1.3 mm

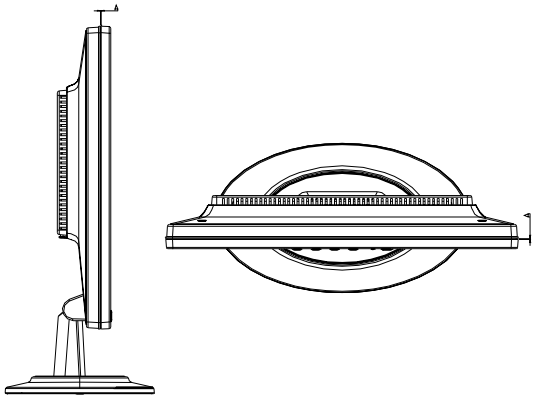

Back Cover & Hinge Cover concavity

0mm ≤ B ≤ 0.5mm

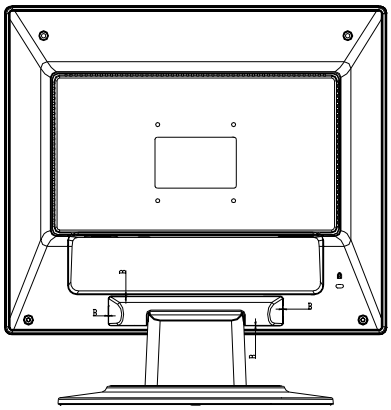

Base & Neck concavity

0mm ≤ C ≤ 0.6mm

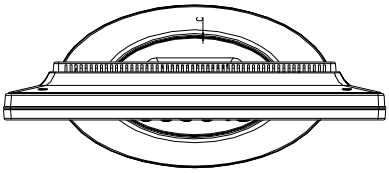

Top and Bottom

Back cover & Bezel step

0mm ≤ D ≤ 0.8 mm

Left and Right

Back cover & Bezel step

0mm ≤ D ≤ 0.8 mm

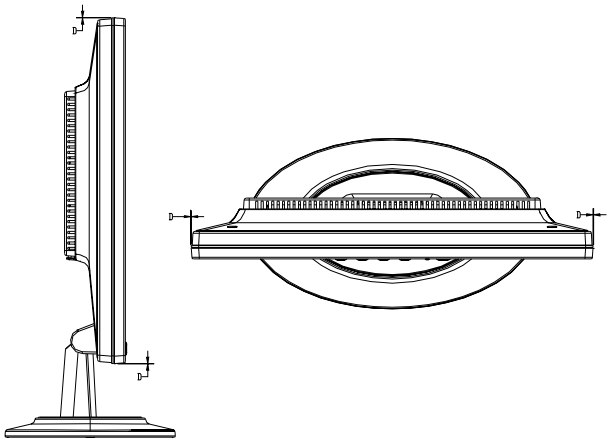

LCD Horizontally

The angle between front bezel and LCD unit in bottom side should not large than 1.0mm.

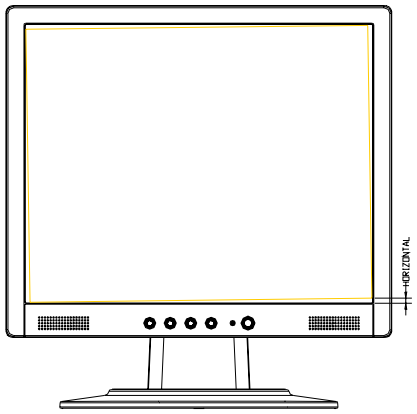

The distance of the LCD display unit from left side to right should not large than 4.0mm.

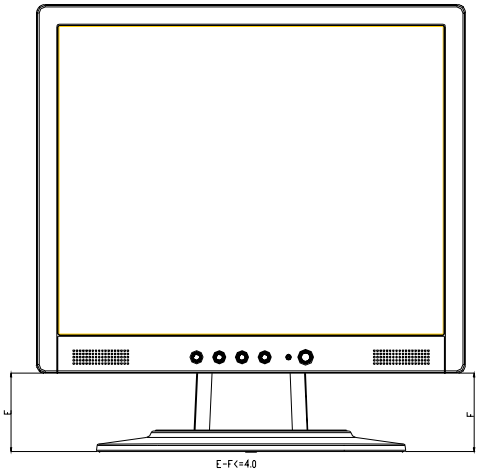

Tilt Base Rotation

Tilt up 15 ± 2°/ down 5 ±2°

Plastic Material

For TCO99

Front Bezel PC+ABS

Back Cover PC+ABS

The Others ABS 94HB

For MPRII

Front Bezel ABS 94V-0

Back Cover ABS 94V-0

The Others ABS 94HB

GAP Spec.

Gap between panel with bezel is 0 mm < gap < 1.2 mm

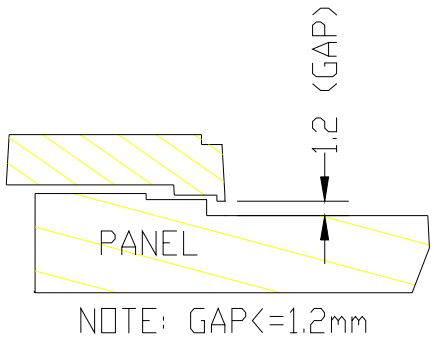

Machine assembly

PICTURE	DESCRIPTION
	Connect the FPC line on panel.
	Assemble the chassis onto panel.
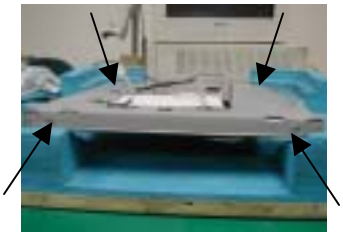	Firmly secure the Panel with 4 screws.
	Plug two speakers to put on bezel.
 AR578 AR577	1. Connect the 13P line with VK board. 2. Firmly secure the VK board with 4 screws.

	Connect speaker wires on VK board. (For AR577 only)
	Connect the bezel with monitor.
	To reverse the monitor.
 AR577 AR578	Assemble the power board onto chassis.

<table>
<tr>
<td> 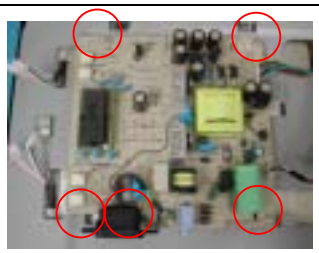
AR577
 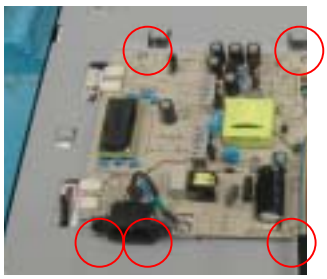
AR578</td>
<td>Firmly secure the power board with 5 screws.</td>
</tr>
<tr>
<td> 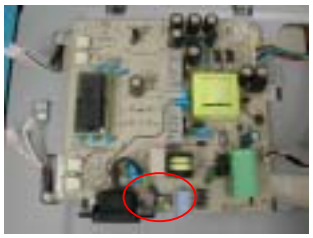
AR577</td>
<td rowspan="2">Firmly secure the power cable with screws.</td>
</tr>
<tr>
<td> 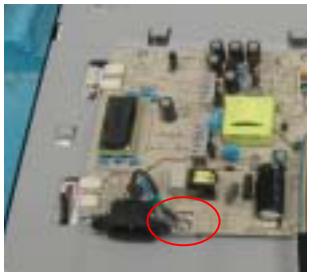
AR578</td>
</tr>
<tr>
<td> 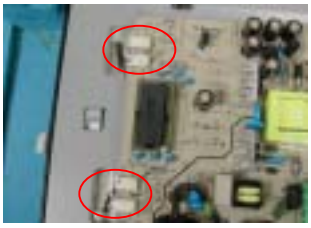 </td>
<td>Connect four panel voltage line on power board.</td>
</tr>
</table>

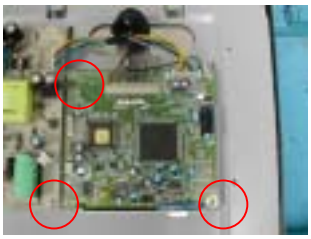	1. Assemble the VL board onto chassis. 2. Firmly secure the VIL board with 3 screws.
	Firmly secure the VIL board and line with screws.
	Connect the FPC on VL board.
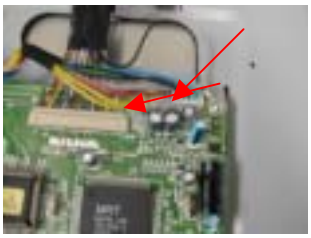	Connect the power line on VL board.
 AR577	Connect the VL-VK line on VL board.
 AR578	

	Connect the audio line on power board. (For AR577 only)
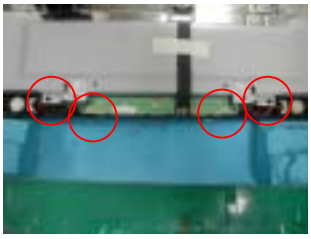	Firmly secure the line and chassis with 4 screws.
 AR577	Check it.
 AR578	
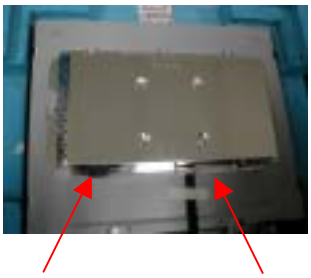	Put the EMI cover on monitor..
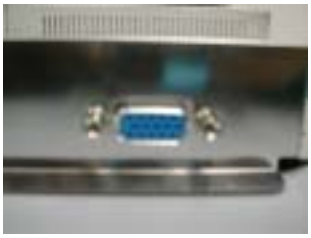	Put the screws on EMI cover with monitor.

	Put the screws on EMI cover with monitor.
	1. Connect the back cover with monitor. 2. Firmly secure the back cover with 4 screws.
	1. Assemble the neck bracket onto neck. 2. Firmly secure the neck bracket with 4 screws.
	1. Connect the hinge with neck. 2. Firmly secure the hinge with 3 screws.
	1. Assemble the neck with back cover. 2. Firmly secure the neck with 4 screws.
	Assemble the base with monitor

Chapter 4

Troubleshooting

Main Procedure

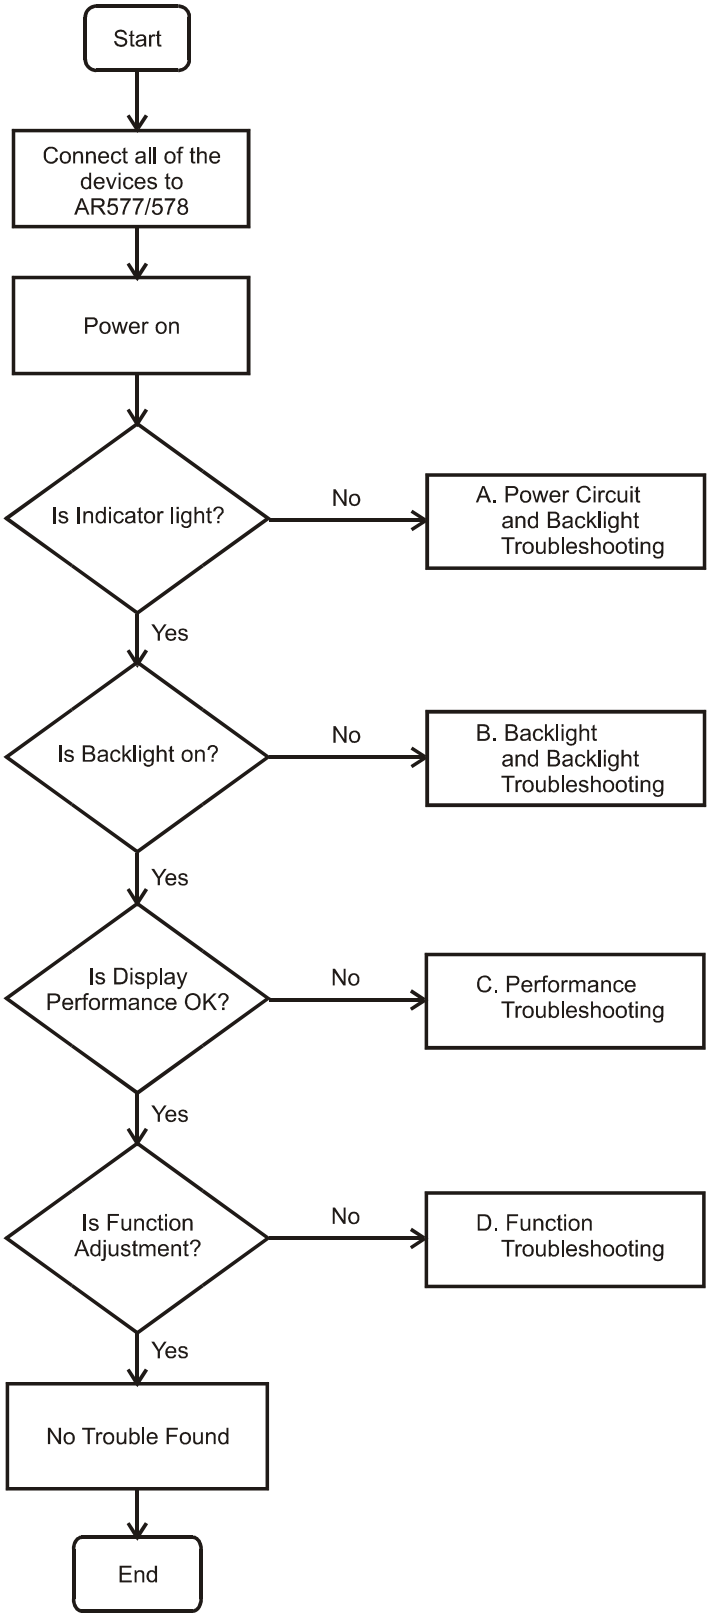

Power Circuit and Backlights Troubleshooting

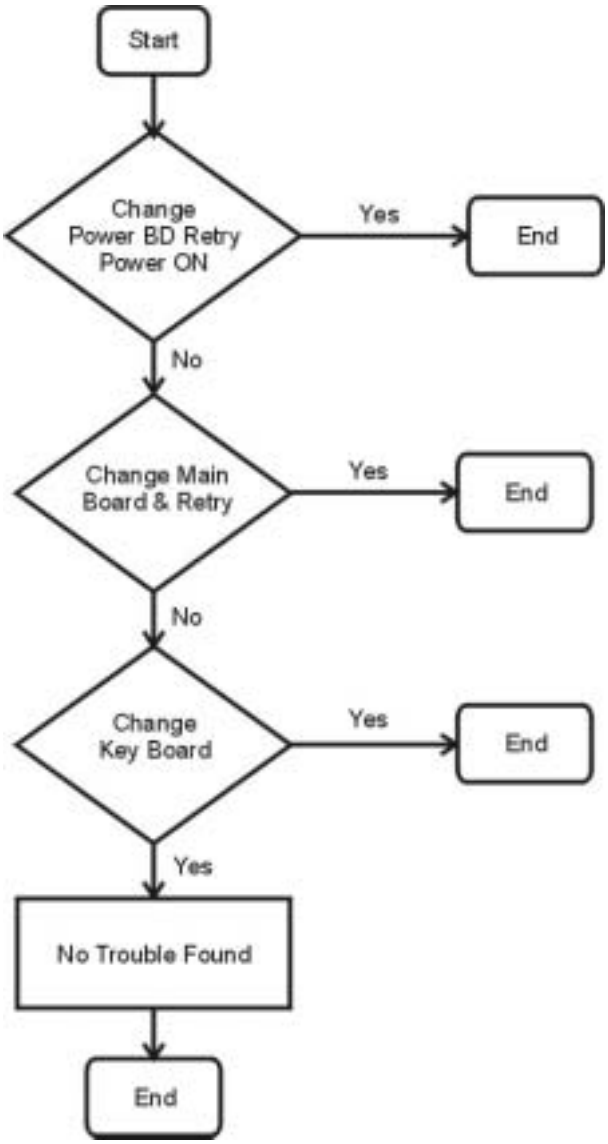

Performance Troubleshooting

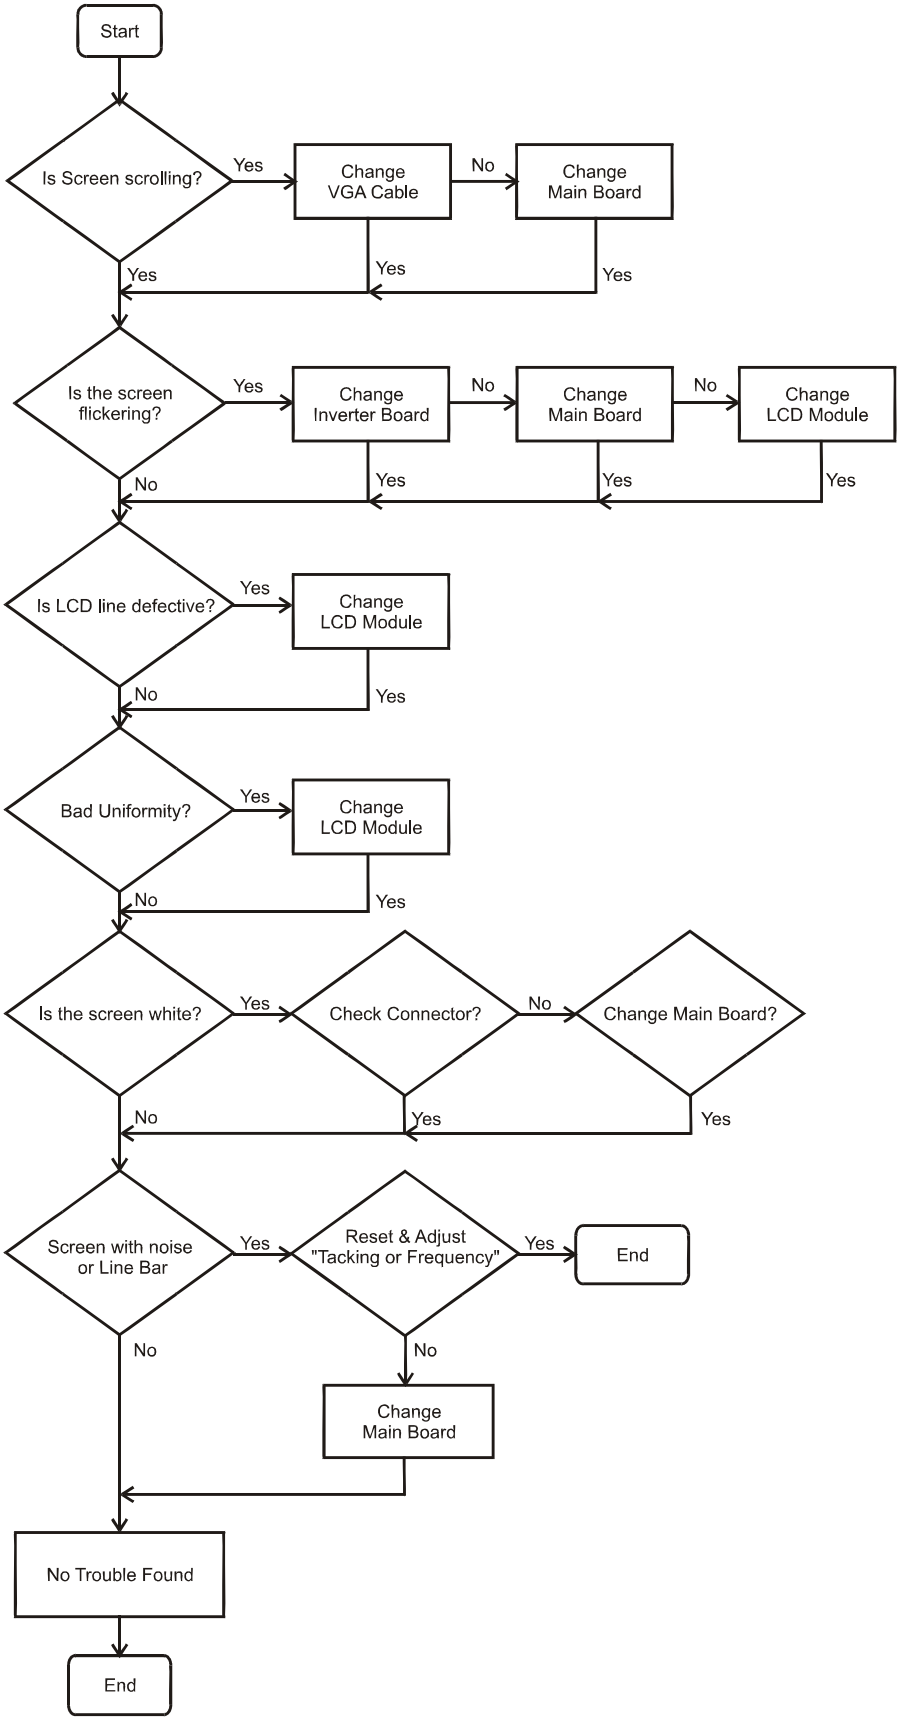

Function Troubleshooting

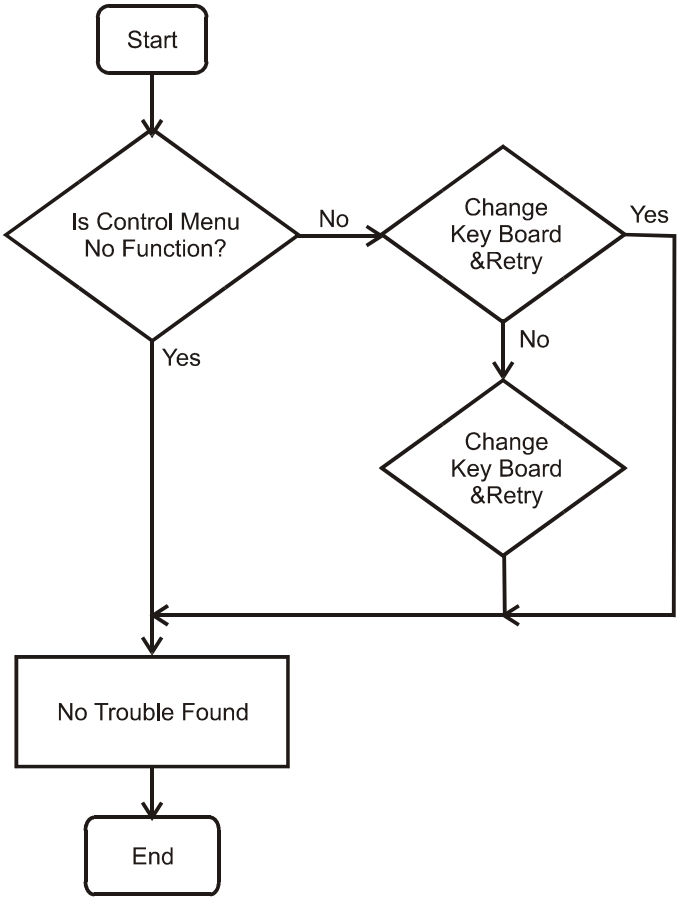

Chapter 5

Connector Information

Phonejack stereo

PIN1. right : CEE22 typed connector

PIN2. Left

PIN3. Gnd : Line-in receptacle

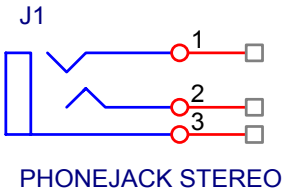

PHONEJACK STEREO

Video input Connector

Analog Video input Connector: 15pins mini D-Sub

Table 2.4.5. Pin assignment for D-sub connector

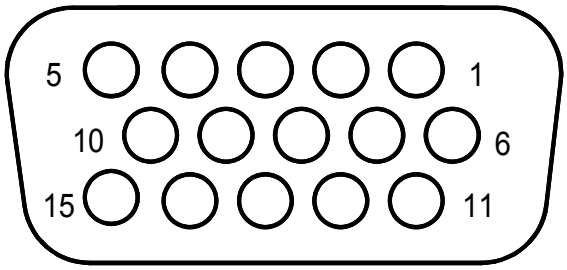

PIN NO.	Separate Sync
1	RED VIDEO
2	GREEN VIDEO
3	BLUE VIDEO
4	GROUND
5	GROUND
6	RED GROUND
7	GREEN GROUND
8	BLUE GROUND
9	PC5V (+5V DDC)
10	CABLE DETECTION
11	GROUND
12	SDA
13	H.SYNC
14	V.SYNC
15	SCL

Chapter 6

FRU (Field Replaceable Unit) list

This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of AL1715. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

NOTE : Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel(http://aicsl.acer.com.tw/spl/). For whatever reasons a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED CERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts repair and service of customer machines.

NOTE: To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how best to dispose it, or follow the rules set by your regional Acer office on how to return it.

Model: AR577

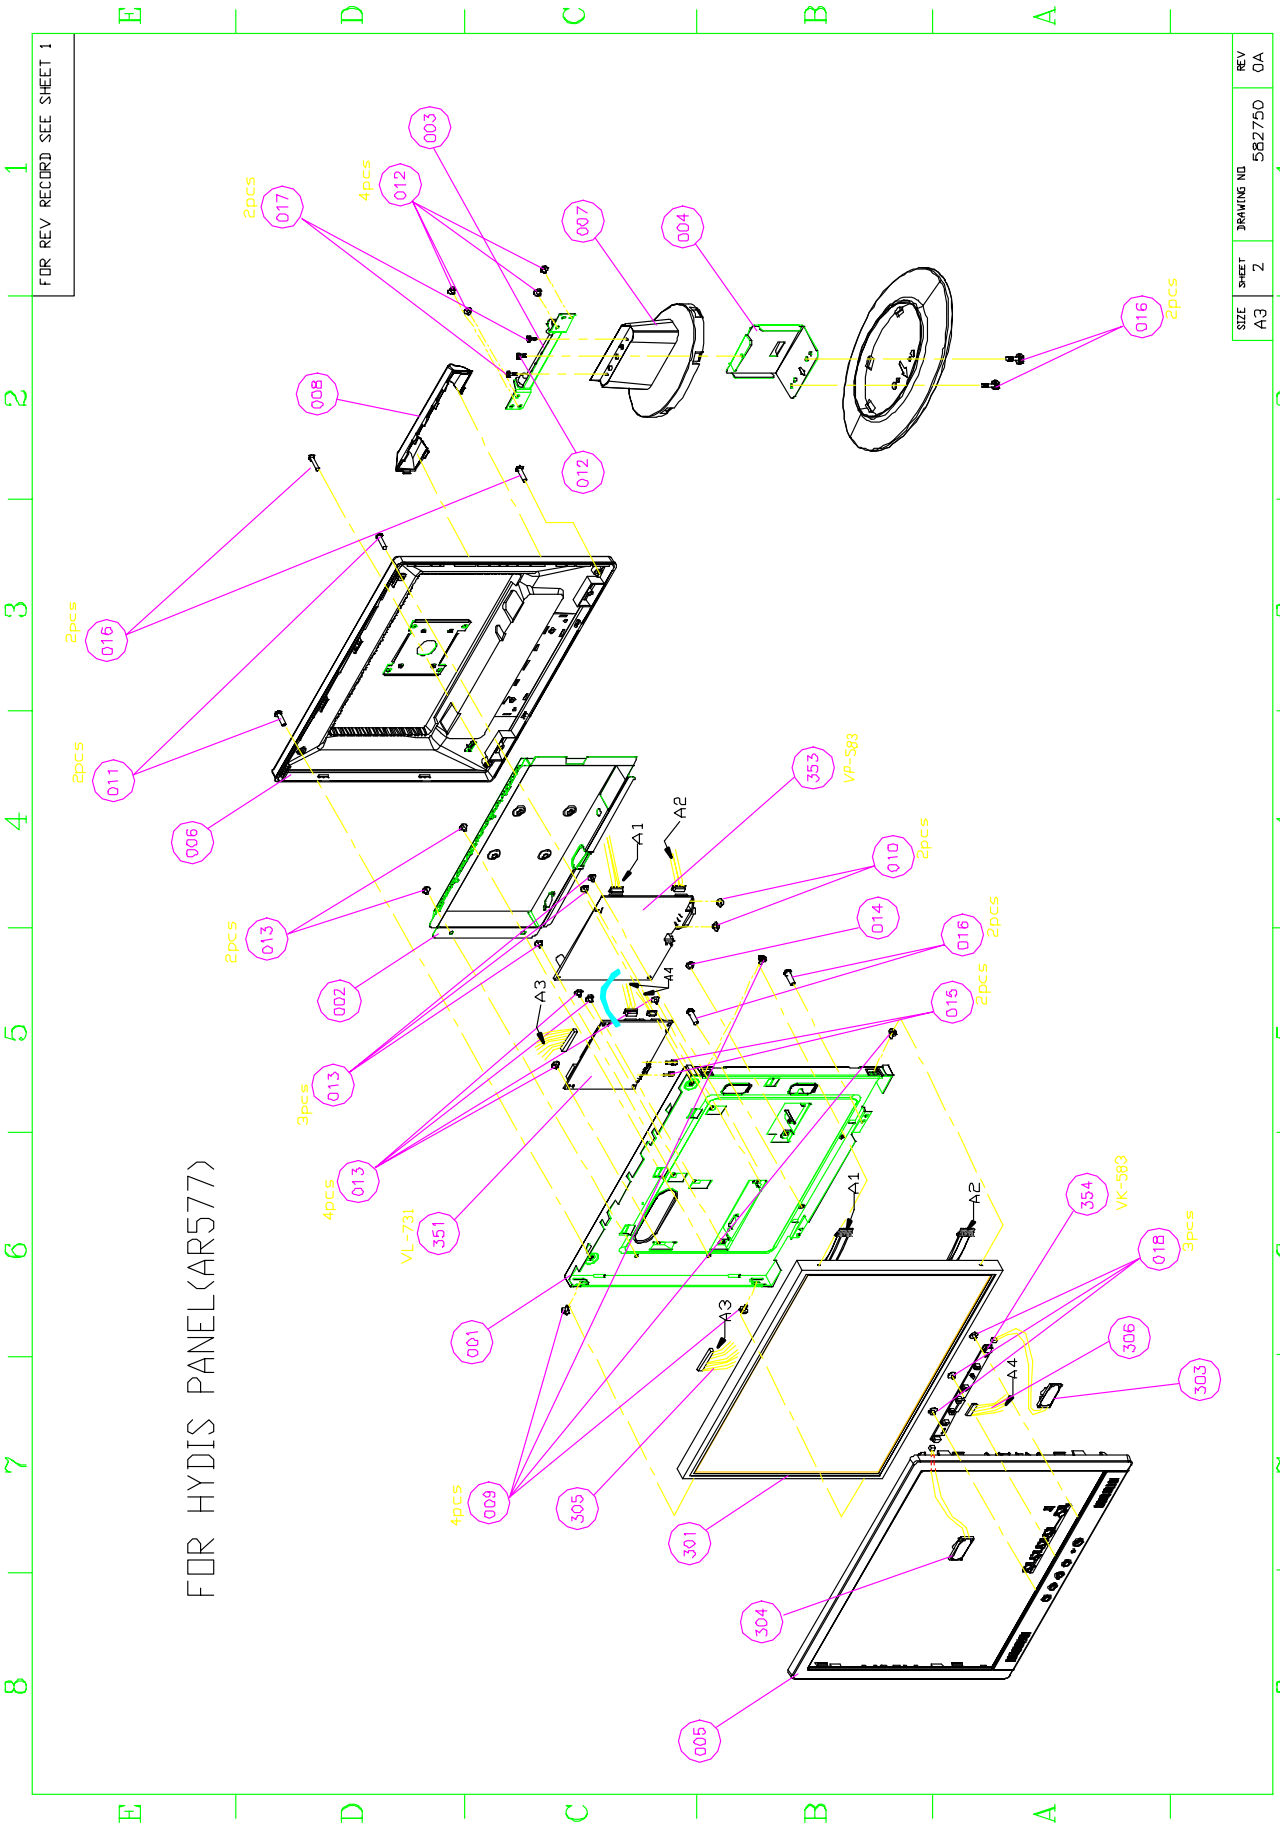
FOR REV RECORD SEE SHEET 1
SIZE A3
SHEET 2
DRAWING NO 582750
REV 0A
FOR HYDIS PANEL(AR577)
VP-583
VL-731
VK-583
2pcs
3pcs
4pcs

Model:AR578

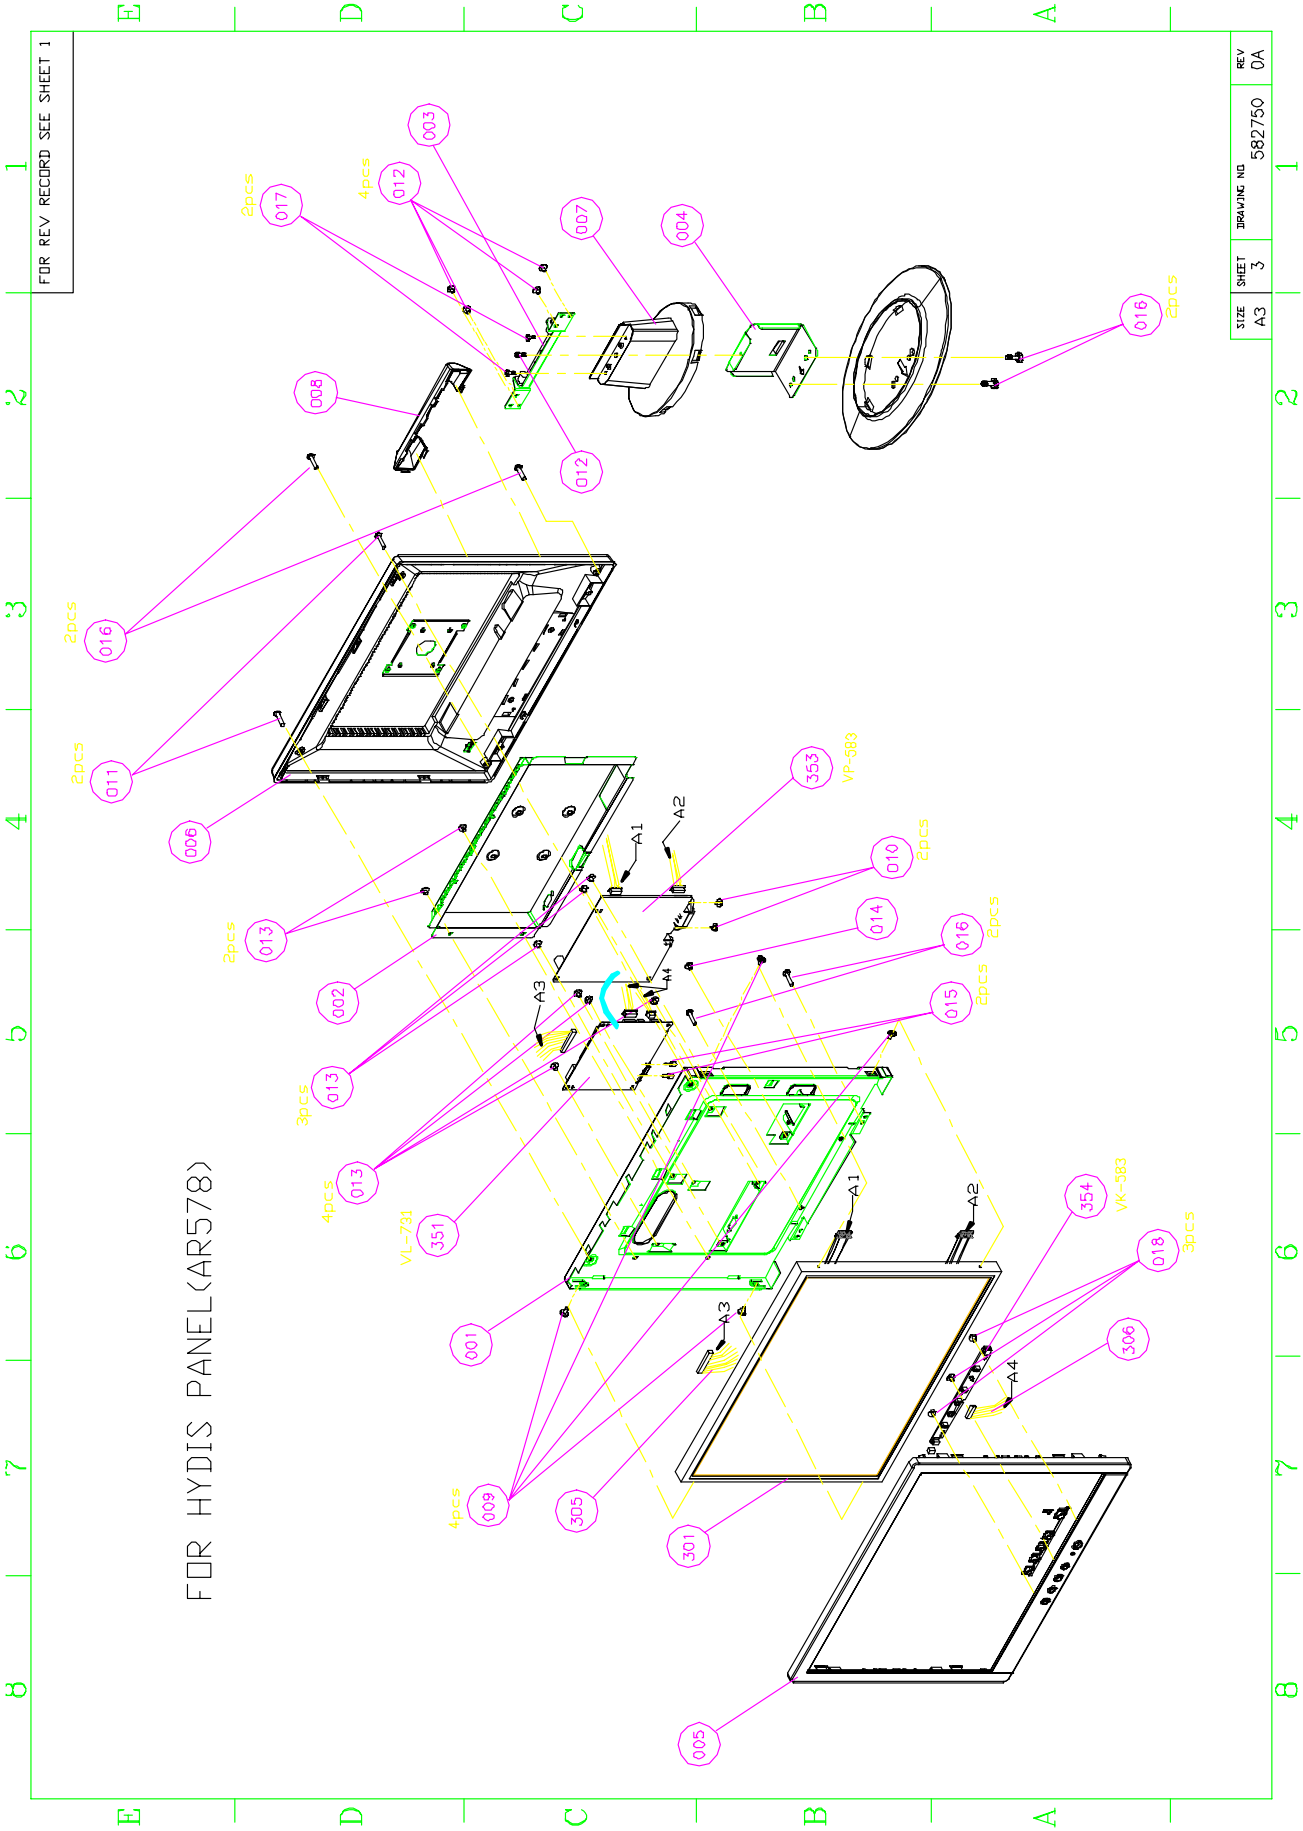
FOR REV RECORD SEE SHEET 1
FOR HYDIS PANEL(AR578)
SIZE A3
SHEET 3
DRAWING NO 582750
REV 0A

Part list

A. For AL1715

No.	Photo	Part Name	Description	Vendor No.
1		Back Cover Screws	M4X0.7+6P-NI	MAA20093004
2		BaseASSY(FOOT)	AR7714A(ABS94HB,MCG62)	FAAR7714A10
3		Stand Screws	M4X0.7+11P-MC WASHER DIM 8.0	MAA70002400
4		NECK COVER	AR7721(ABS94HB,MCG62)	FAAR7721100
6		NECK BRACKET	AR7722(SECC1.0)	ECAR7722000
7		HINGE ASSY	AR7717(SK-7,T=22)	ECAR7717000
8		NECK	AR7713(ABS94HB.MCG62)	FAAR7713100
9		Panel & Chassis	M3X0.5+4I-NI	MAA00001240
10		Function Board	VK-583 LAR577Y	454AAP30001
11		BACK COVER, Neck & Neck Bracket, Chassis & Bezel	TPP-4.0+10P-NI	MAB20074201

12		Back Cover	AR7712A(PC+ABS,MCG62)	FAAR7712A10
13		Hinge Screws	TPB-4+8C-MC	MAB7T002401
14		Mainboard & Chassis	4#40UNCX12.7 PLS-WASHER	MAAA0019400
15		Speaker (R/L)	2W 40HM 37.5X17X9.5mm 50mm	CG10021V920 CG10021V930
16		POWER BOARD &CHASSIS	M3x0.5+6F-ZK	MAA10022007
17	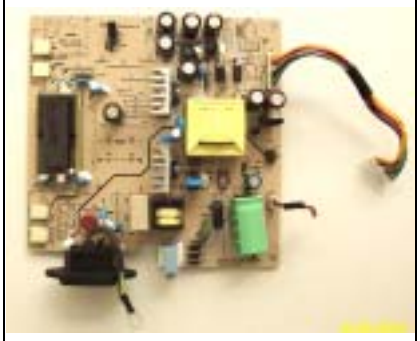	Invertor Board	VP-583 LAR577Y	453AAP30001
18	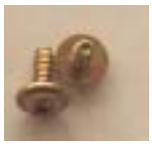	Key/B & Bezel	TPP2X3+12B-MC	MAB80007400
19		POWER BOARD &CHASSIS	M4.0X0.7+8BTF-MC	MAA80014400
20		Function board to Mainboard cable	AR577 CTRL-KEY 13P	DC020162300
21		Main Shield	AR7716(TIN0.3)	ECAR7716000
22		Mainboard and Invertor Board Screws	M3X0.5+4C-NI	MAA70003100

23		Mainboard	VL-731 LAR577Y	461AAI300E1
24		Frame(BEZEL)	AR7711A (PC+ABS,MCG62)	FAAR7711A10
25		Main Frame/CHASSIS	AR7715(SECC1.0)	ECAR7715000
26		Mainboard to LCD Cable	JP577 PANEL-CTRL 30P	DC020160700
27		LCD Panel(F)	HT17E12-200 17”(HYDIS)	AC6V0000200
28		LCD Panel(B)	HT17E12-200 17”(HYDIS)	AC6V0000200

B. For AR577 (Acer model:AL1715 bm)

No.	Photo	Part Name	Description	Part No.
1		BACK COVER SCREWS	M4X0.7+6P-ZK	MAA20093300
2		BACK COVER, Neck & Neck Bracket, Chassis & Bezel	TPP-4.0+10P-ZK	MAB20074202
2		BaseASSY(FOOT)	AR7714A(ABS94HB,MBK24)	FAAR7714A00
4		Stand Screws	M4X0.7+11P-MC WASHER DIM 8.0	MAA70002400
5		NECK COVER	AR7721(ABS94HB,MBK24)	FAAR7721000
6		NECK BRACKET	AR7722(SECC1.0)	ECAR7722000
7		HINGE ASSY	AR7717(SK-7,T=22)	ECAR7717000
8		NECK	AR7713(ABS94HB.MBK24)	FAAR7713000
9		Panel & Chassis	M3X0.5+4I-NI	MAA00001240
10		Function Board	VK-583 LAR577Y	454AAP30001
11		Back Cover	AR7712A(PC+ABS,MBK24)	FAAR7712A00
12		Hinge Screws	TPB-4+8C-MC	MAB7T002401

13		Mainboard & Chassis	4#40UNCX12.7 PLS-WASHER	MAAA0019400
14		Speaker (R/L)	2W 40HM 37.5X17X9.5mm 50mm	CG10021V920 CG10021V930
15		POWER BOARD &CHASSIS	M3x0.5+6F-ZK	MAA10022007
16	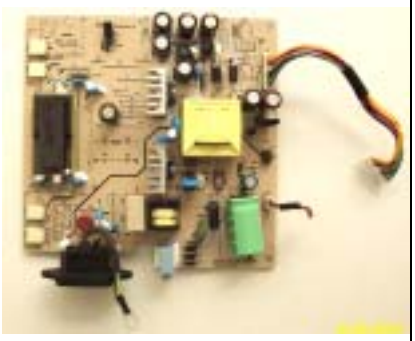	Invertor Board	VP-583 LAR577Y	453AAP30001
17		Key/B & Bezel	TPP2X3+12B-MC	MAB80007400
18		POWER BOARD &CHASSIS	M4.0X0.7+8BTF-MC	MAA80014400
19		Function board to Mainboard cable	AR577 CTRL-KEY 13P	DC020162300
20		Main Shield	AR7716(TIN0.3)	ECAR7716000
21		Mainboard and Invertor Board Screws	M3X0.5+4C-NI	MAA70003100
22		Mainboard	VL-731 LAR577Y	461AAI300E1

23		Frame(BEZEL)	AR7711A (PC+ABS,MBK24)	FAAR7711A00
24		Main Frame/CHASSIS	AR7715(SECC1.0)	ECAR7715000
25		Mainboard to LCD Cable	JP577 PANEL-CTRL 30P	DC020160700
26		LCD Panel(F)	HT17E12-200 17”(HYDIS)	AC6V0000200
27		LCD Panel(B)	HT17E12-200 17”(HYDIS)	AC6V0000200

C. For AR578 (Acer model:AL1715)

No.	Photo	Part Name	Description	Part No.
1		Back Cover Screws	M4X0.7+6P-NI	MAA20093004
2		BaseASSY(FOOT)	AR7714A(ABS94HB,MCG62)	FAAR7714A10
3		Stand Screws	M4X0.7+11P-MC WASHER DIM 8.0	MAA70002400
4		NECK COVER	AR7721(ABS94HB,MCG62)	FAAR7721100
6		NECK BRACKET	AR7722(SECC1.0)	ECAR7722000
7		HINGE ASSY	AR7717(SK-7,T=22)	ECAR7717000
8		NECK	AR7713(ABS94HB.MCG62)	FAAR7713100
9		Panel & Chassis	M3X0.5+4I-NI	MAA00001240
10		Function Board	VK-583 LAR578Y	454AAP30011
11		BACK COVER, Neck & Neck Bracket, Chassis & Bezel	TPP-4.0+10P-NI	MAB20074201

12		Back Cover	AR7812A(PC+ABS,MCG62)	FAAR7812A10
13		Hinge Screws	TPB-4+8C-MC	MAB7T002401
14		Mainboard & Chassis	4#40UNCX12.7 PLS-WASHER	MAAA0019400
15		POWER BOARD &CHASSIS	M3x0.5+6F-ZK	MAA10022007
16		Invertor Board	VP-583 LAR578Y	453AAP30011
17		Key/B & Bezel	TPP2X3+12B-MC	MAB80007400
18		POWER BOARD &CHASSIS	M4.0X0.7+8BTF-MC	MAA80014400
19		Function board to Mainboard cable	AR578 CTRL-KEY 13P	DC020162500
20		Main Shield	AR7816(TIN0.3)	ECAR7816000
21		Mainboard and Invertor Board Screws	M3X0.5+4C-NI	MAA70003100
22		Mainboard	VL-731 LAR578Y ABO	461AAI300E2

23		Frame(BEZEL)	AR7811A (PC+ABS,MCG62)	FAAR7811A10
24		Main Frame/CHASSIS	AR7715(SECC1.0)	ECAR7715000
25		Mainboard to LCD Cable	JP577 PANEL-CTRL 30P	DC020160700
26		LCD Panel(F)	HT17E12-200 17”(HYDIS)	AC6V0000200
27		LCD Panel(B)	HT17E12-200 17”(HYDIS)	AC6V0000200

D. For AR578 (Acer model:AL1715 b)

No.	Photo	Part Name	Description	Part No.
1		Back Cover Screws	M4X0.7+6P-ZK	MAA20093300
2		BaseASSY(FOOT)	AR7714A(ABS94HB,MBK24)	FAAR7714A00
3		Stand Screws	M4X0.7+11P-MC WASHER DIM 8.0	MAA70002400
4		NECK COVER	AR7721(ABS94HB,MBK24)	FAAR7721000
5		NECK BRACKET	AR7722(SECC1.0)	ECAR7722000
6		HINGE ASSY	AR7717(SK-7,T=22)	ECAR7717000
7		NECK	AR7713(ABS94HB.MBK24)	FAAR7713000
8		Panel & Chassis	M3X0.5+4I-NI	MAA00001240
9		Function Board	VK-583 LAR578Y	454AAP30011
10		BACK COVER, Neck & Neck Bracket, Chassis & Bezel	TPP-4.0+10P-ZK	MAB20074202
11		Back Cover	AR7812A(PC+ABS,MBK24)	FAAR7812A00

12		Hinge Screws	TPB-4+8C-MC	MAB7T002401
13		Mainboard & Chassis	4#40UNCX12.7 PLS-WASHER	MAAA0019400
14		POWER BOARD &CHASSIS	M3x0.5+6F-ZK	MAA10022007
15		Invertor Board	VP-583 LAR578Y	453AAP30011
16		Key/B & Bezel	TPP2X3+12B-MC	MAB80007400
17		POWER BOARD &CHASSIS	M4.0X0.7+8BTF-MC	MAA80014400
18		Function board to Mainboard cable	AR578 CTRL-KEY 13P	DC020162500
19		Main Shield	AR7816(TIN0.3)	ECAR7816000
20		Mainboard and Invertor Board Screws	M3X0.5+4C-NI	MAA70003100
21		Mainboard	VL-731 LAR578Y ABO	461AAI300E2
22		Frame(BEZEL)	AR7811A (PC+ABS,MBK24)	FAAR7811A00

23		Main Frame/CHASSIS	AR7715(SECC1.0)	ECAR7715000
24		Mainboard to LCD Cable	JP577 PANEL-CTRL 30P	DC020160700
25		LCD Panel(F)	HT17E12-200 17”(HYDIS)	AC6V0000200
26		LCD Panel(B)	HT17E12-200 17”(HYDIS)	AC6V0000200

POWER/Inverter Board

Description

This specification defined the performance and characteristic of power/inverter board.

It supplies the following outputs :

1). 5Vdc: Logic power.

2). 5Vaudio: Audio power.

3). 15Vinv: Inverter power.

Features

Input Voltage: 100 ~ 240 ±10%Vac

Input current: 1.2Amax. at 90Vac

Input Frequency: 47 ~ 63Hz

Input power saving consumption: Less than 1.2W @ minimum load

Total output power: 60Wmax

Inverter brightness adjustment: Burst mode

Protection function: auto-recovery type

Interface Signals

Input

1. AC Inlet: HUAJIE SA-4S-066 or compatible.

2. J701: SC SCJ-0345-1-X-9 3.6D BLU 3P or compatible.

Output Connector & Pin Assignment:

1. The connecter was pitch 2.0mm, cable length was 125mm.

PIN NO.	Function	Function
1	+5Vaudio	Audio power (optional).
2	GND	Audio ground
3	GND	Ground
4	GND	Ground
5	Vbri	Brightness control from logical board (0V to 3.3V)
6	----	-----
7	Ven	Inverter enable signal from logical board (high active , >3V)
8	+5Vdc	+5Vdc supply for logical board
9	+5Vdc	+5Vdc supply for logical board
10	+5Vdc	+5Vdc supply for logical board

2.Inverter-side connecter : SM02B-BHSS-1-TB(JST) for AR577

/ SM02(8.0)B-BHS-1(JST) for AR599 or equivalent.

PIN NO.	Function	Comment
1	Cth	VBLH(High voltage)
2	Ctl	VBLL(Low voltage)

Electrical Specification:

AC-DC Electrical specification

Input Specification

No	Item	Condition	Min.	Typ.	Max.	Unit
1	Input Voltage	-----	100	---	240	Vac
2	Input Frequency	-----	47	---	63	Hz
3	Input Current	-----	---	---	1.0	Arms
4	Inrush Current	Cold Start @Vin=100Vrms	---	---	30	A_{0-P}
		Cold Start @Vin=240Vrms		---	50	A_{0-P}
5	Hold Up Time	@full load & 100Vac input	10	---	---	ms
6	Turn on time	Vin =110Vac	---	1.0	---	S
7	Efficiency	Full load	---	70	---	%
8	Consumption	Vin=240Vac,@ no load	---	---	1	W

AC-DC Output Specification

	Tolerance	Output Current		Voltage Tolerance
Output Voltage	---	MIN	MAX	
+5Vdc	+5 /-3 %	0.05A	1.5A	4.85~5.25V dc
+15Vinv	+35/-5 %	0A	2A	20~14.3Vdc
+5Vaudio	±5%	0A	0.6A	4.75~5.25Vdc
Ripple	1.Measured at DC output terminals which are paralleled with a 10uf Ecap &0.1uf Ceramic cap. 2.Band width is limited within 20MHz.	---	1%	+5Vdc:50mVp-p +15Vinv:150mVp-p
Noise		---	3%	+5Vdc:150mVp-p +15Vinv:450mVp-p
Dynamic Load Regulation	50~100% or 100~50% load change of any DC output @50% duty of 1MHz (min.)	---	±5%	---
Over / Under Shoot	@ Power line on/off	---	±5%	---

*+5Vdc load regulation test: the +15Vinv loading at 2.0A

*+15Vinv load regulation test: the +5Vdc loading at 1.5A

Protection function

1) SCP: Short circuit protection must be acted on both outputs

2) OPP: Should be protected when output power consumption is within 60W ~ 75W

Inverter Electrical Specification:

For Hydis HT17E12-200 (AR577)

	Condition	Min.	Typ.	Max.	Unit
Input Voltage	---	---	15	---	V
Input Current	---	---	1.5	---	A
Backlight ON/OFF Control	ON		3.3		V
	OFF		0		V
Brightness Adjust	Min. Luminance / Max. Luminance	---	30%	---	---
Output Voltage	Vin=15V, Iout=6.5mA	690	700	840	Vrms
Brightness	lamp current in 6.5mA	200	250		Cd/m²
Output Current(Each connector)	Vbri=0.4V~3.3V	3	6.5	7	mA
Frequency	---	30	---	70	KHz
Lamp start voltage	@0℃	---	1340	1570	Vrms
Striking Time	---		1	---	S
Lamp Current Balance	---	---	±0.3	---	mA
Efficiency	Vin=15V	---	80	---	%
Operating Life Time	---	40000	50000	---	Hr

*.The open lamp voltage is testes at output connector terminal

SAFETY

Leakage Current: 0.25mA @ 100Vac

Insulation Resistance: more than 3M ohms while withstanding a voltage of 500Vac

Hi-Pot: 3Kvac with using 3mA cut off current

Power Consumption

The monitor is equipped with a power-management according to the below.

There is a delay of 5s … 7s before the transition from On-state to any power saving state to avoid unintentionally entering of a power saving stage during display resolution and timing mode changes.

Transition from any power saving state to another can be instantaneous.

The recovery from Off-state requires no manual power on.

Mode	H-Sync.	V-Sync.	Video	Pw-cons.	Indicator	Rec. time*
Power-On	on	on	active	< 75W	Green LED	--
Power-off	off	off	blanked	< 5 W	Orange LED	< 5S
Switch-off				< 5W	Dark LED	

SYNC. On means: Normal operation

SYNC. Off means: H sync. F < 10KHz duty cycle > 25%

V sync. F < 10Hz duty cycle > 25%

CONNECTORS / CONTROLS

Connectors

- Power : Monitor rear side : AC Inlet
- Analog RGB : Monitor rear side / Data Cable : 15-pin D-sub female / male

Pin – Assignment of 15-pin D-sub:

1	Red Video	9	+5V FOR DDC
2	Green Video	10	Detect
3	Blue Video	11	Serial Data for ISP
4	Serial Clock for ISP	12	Serial Data for DDC
5	Ground	13	H-Sync.
6	Red Ground	14	V-Sync.
7	Green Ground	15	Serial Clock for DDC
8	Blue Ground		

- Audio : Monitor rear side :

-PC I/P for PC : 3.5mm Stereo female

Monitor Control Keys

KEY : Power , Menu , Adjust +/- , Vol +/-, Auto

Position Of Controls

Position of all switches : Bottom side of front bezel

Position of LED : Bottom side of front bezel

Chapter 7

Schematic Diagram

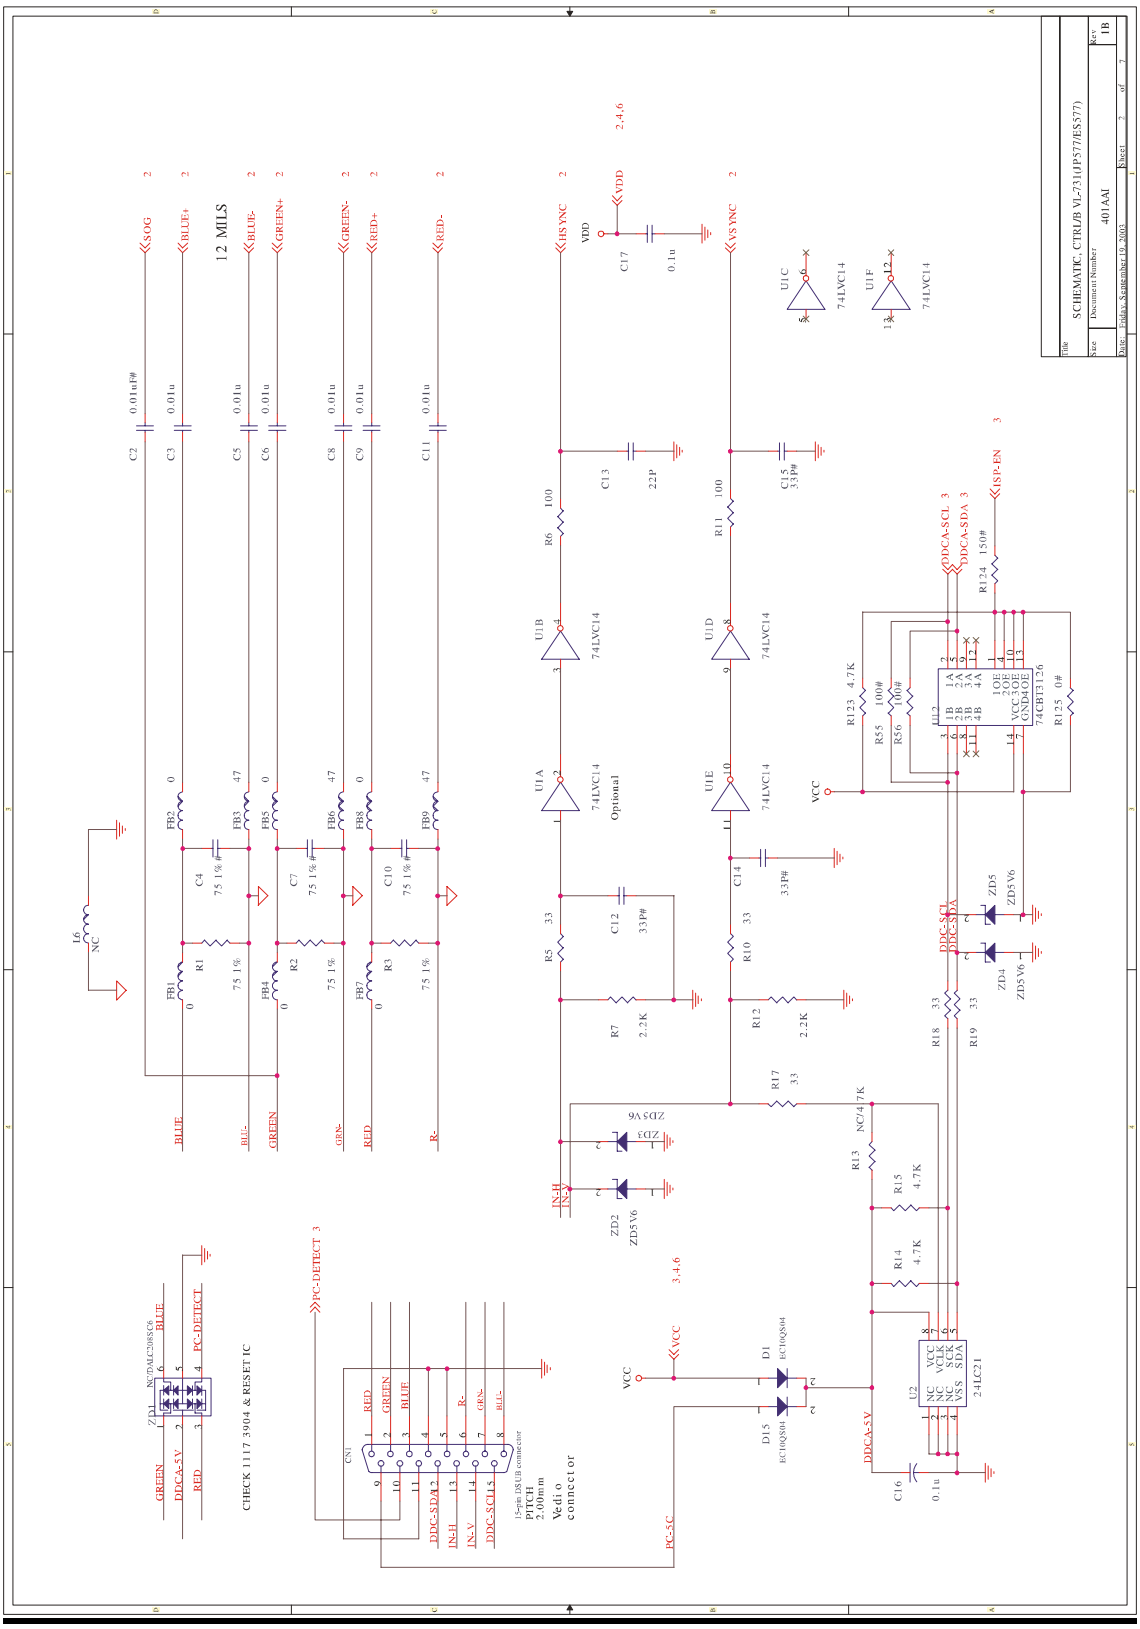

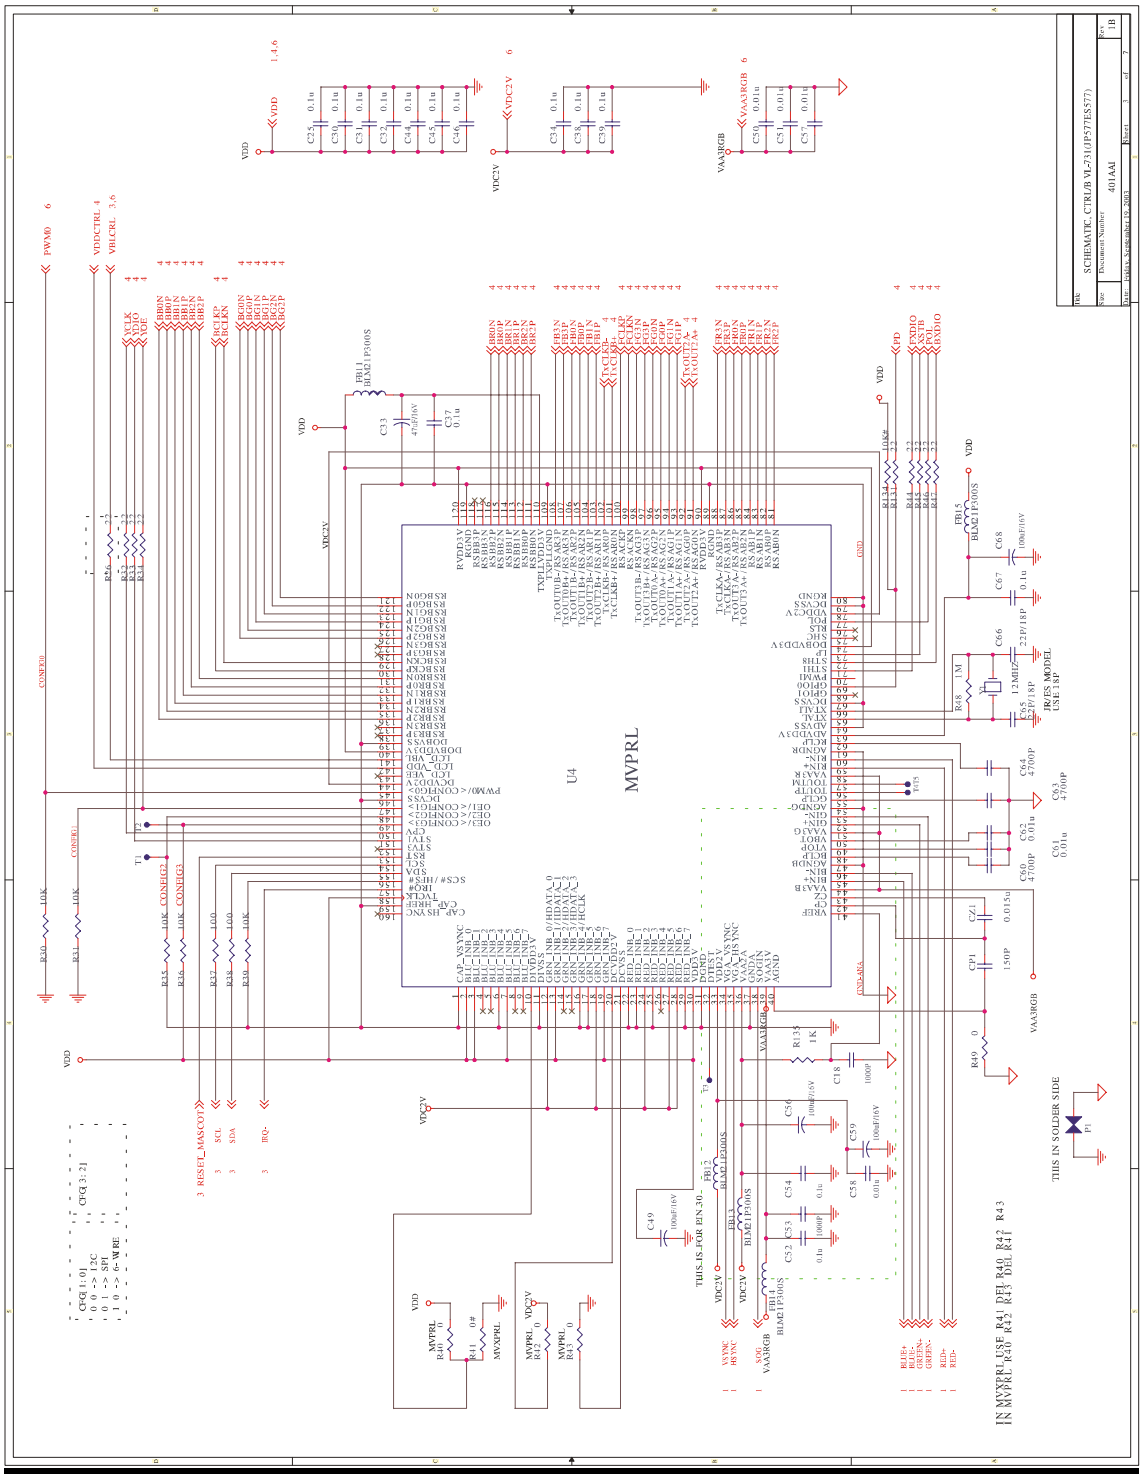
SCHEMATIC CTRL/B VL-7310(PS-7TE5577)
MVPRL
U4
THIS IN SOLDER SIDE

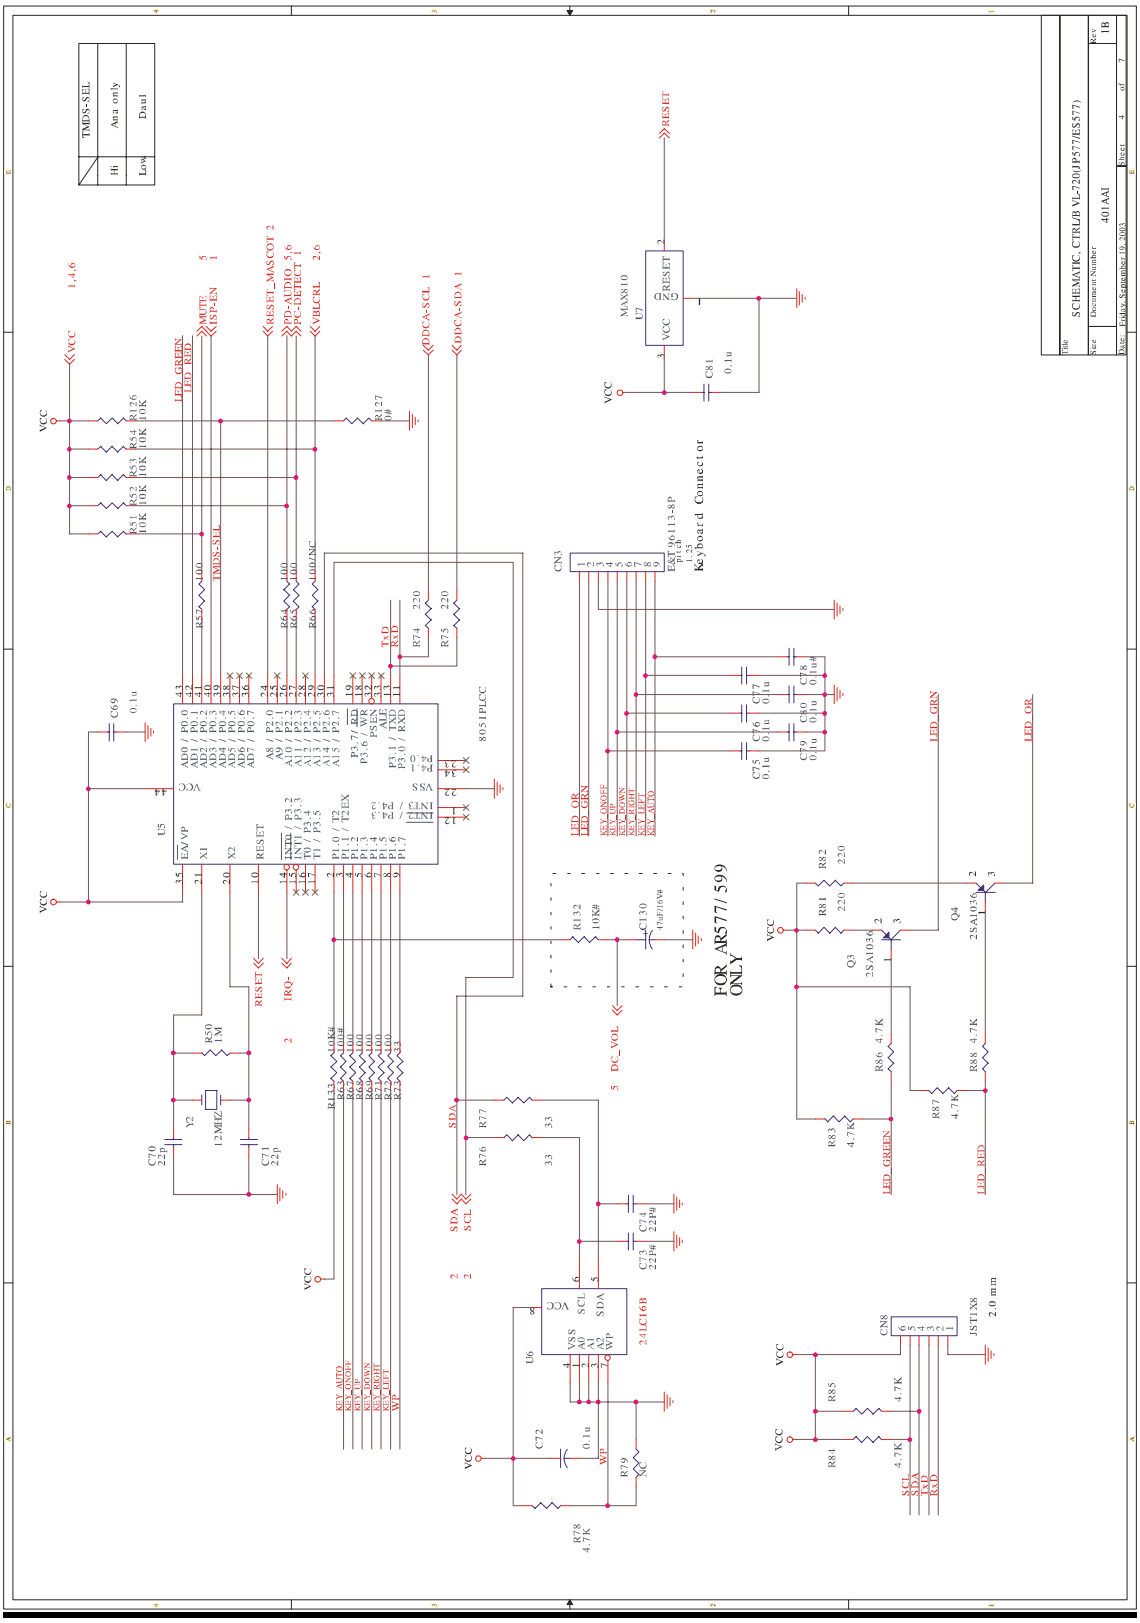
TMDS-SEL
Hi Ana only
Low Daul
SCHEMATIC_CTRL/B VL-720(P577/ES577)
401AAI
1B
Date: Friday, September 19, 2008
Sheet 4 of 7
FOR AR577/599 ONLY
Keyboard Connector
8051PLCC
24LC16B
MAX810
TMDS-SEL
RESET_MASCOT 2
PD-AUDIO 5,6
PC-DETECT 1
VBLCRL 2,6
PDCA-SCL 1
PDCA-SDA 1
LED_GREEN
LED_RED
MUTE
ISP-EN
TXD
RXD
SDA
SCL
IRQ
RESET
DC_VOL
LED_ORG
LED_GRN
KEY_ONOFF
KEY_UP
KEY_DOWN
KEY_RIGHT
KEY_LEFT
KEY_AUTO
WP
2SA1036
JST1X8
2.0 mm

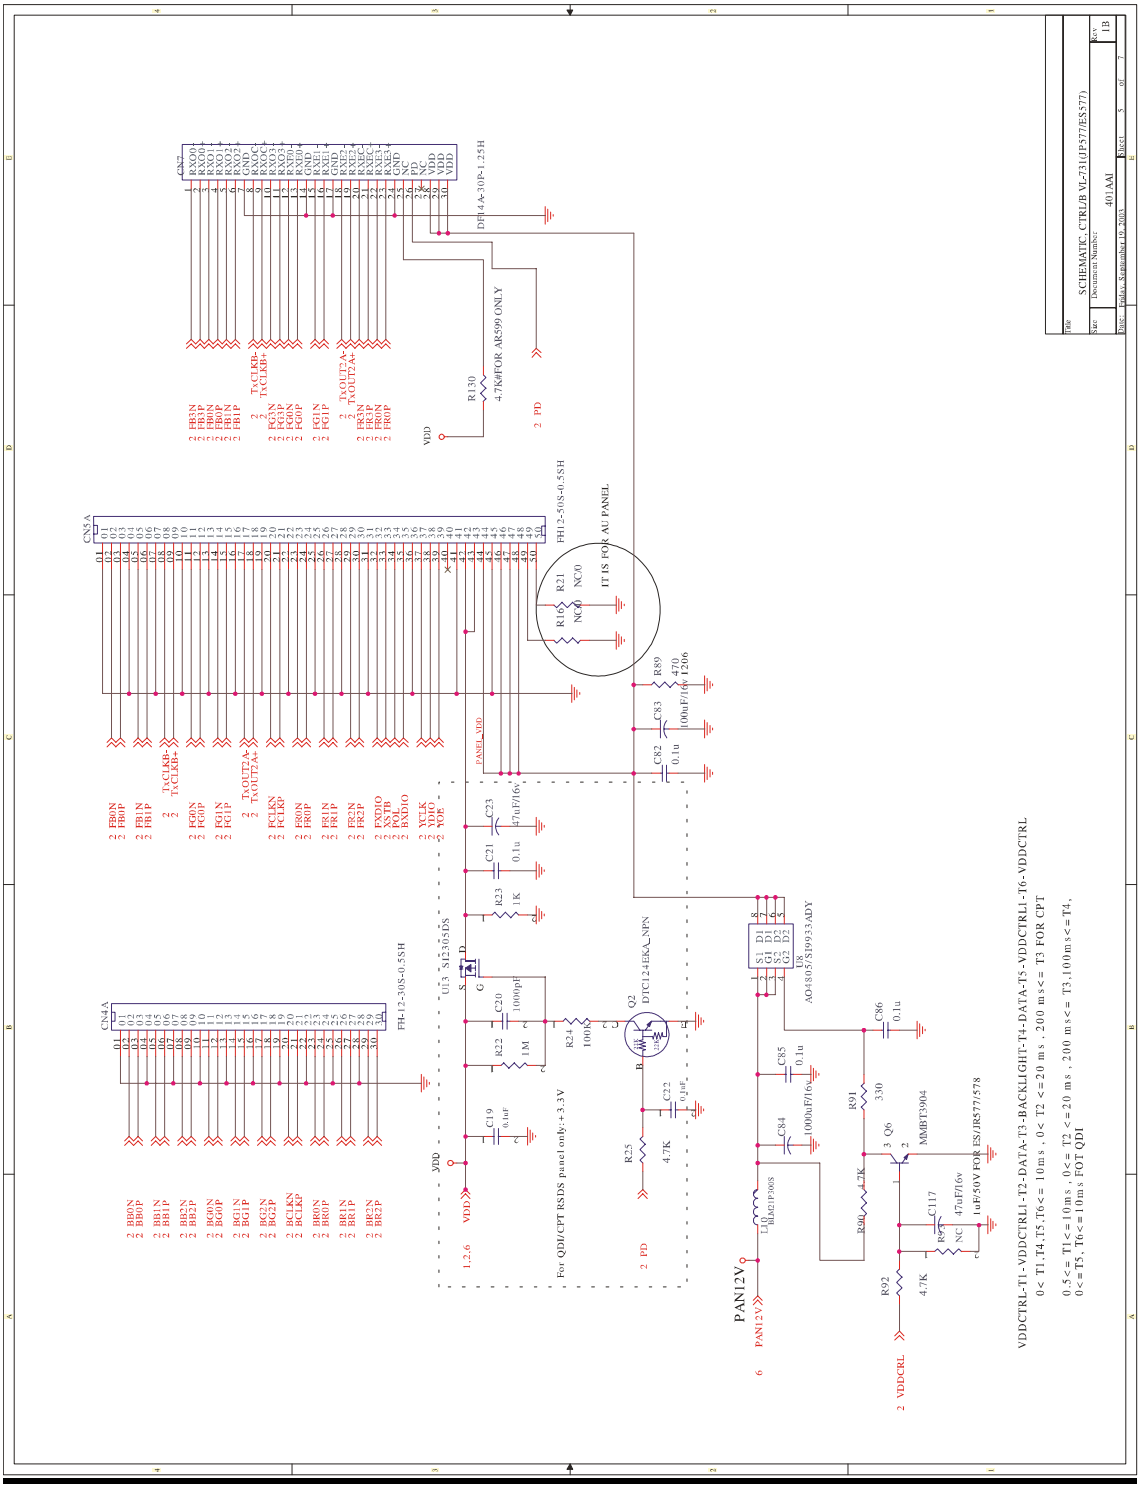
SCHEMATIC, CTRL/B VL-731(UF577/ES577)
401AAI
Rev: 1B
Date: friday, September 05, 2008
Sheet 5 of 7
VDDCTRL-T1-VDDCTRL1-T2-DATA-T3-BACKLIGHT-T4+DATA-T5-VDDCTRL1-T6-VDDCTRL
0< T1,T4,T5,T6<= 10ms , 0< T2 <=20 ms , 200 ms<= T3 FOR CPT
0.5<= T1,T6<= 10ms , 0<= T2 <=20 ms , 200 ms<= T3,100ms<=T4,
0<=T5,T6<=10ms FOT QDI
PAN12V
VDDCRL
VDD
PANEL_VDD
FH-12-30S-0.5SH
FH12-50S-0.5SH
DF14A-30P-1.25H
IT IS FOR AU PANEL
For QDI/CPT RSDS panel only:+3.3V
PD
TxCLKB-
TxCLKB+
TxOUT2A-
TxOUT2A+
FB0N
FB0P
FB1N
FB1P
FG0N
FG0P
FG1N
FG1P
FCLKN
FCLKP
FR0N
FR0P
FR1N
FR1P
FR2N
FR2P
FXDIO
XSTB
RXDIO
YCLK
YDIO
YOE
FB3N
FB3P
FB2N
FB2P
FG3N
FG3P
FG2N
FG2P
FR3N
FR3P
FR2N
FR2P
BB0N
BB0P
BB1N
BB1P
BB2N
BB2P
BG0N
BG0P
BG1N
BG1P
BG2N
BG2P
BCLKN
BCLKP
BR0N
BR0P
BR1N
BR1P
BR2N
BR2P
U13_SI2365DS
Q2
DTC124EKA_NPN
AO4805/S19933ADY
MMBT3904
R130
47K@FOR AR599 ONLY
R16
NC@0
R21
NC@0
C19
6.8uF
C20
1000pF
C21
0.1u
C22
0.1uF
C23
47uF/16v
C82
0.1u
C83
100uF/16v
C84
1000uF/16v
C85
0.1u
C86
0.1u
C117
47uF/16v
10uF/50V FOR ES/JR577/578
R22
1M
R23
1K
R24
100K
R25
4.7K
R89
470
1206
R90
4.7K
R91
330
R92
4.7K
R93
NC
Q6

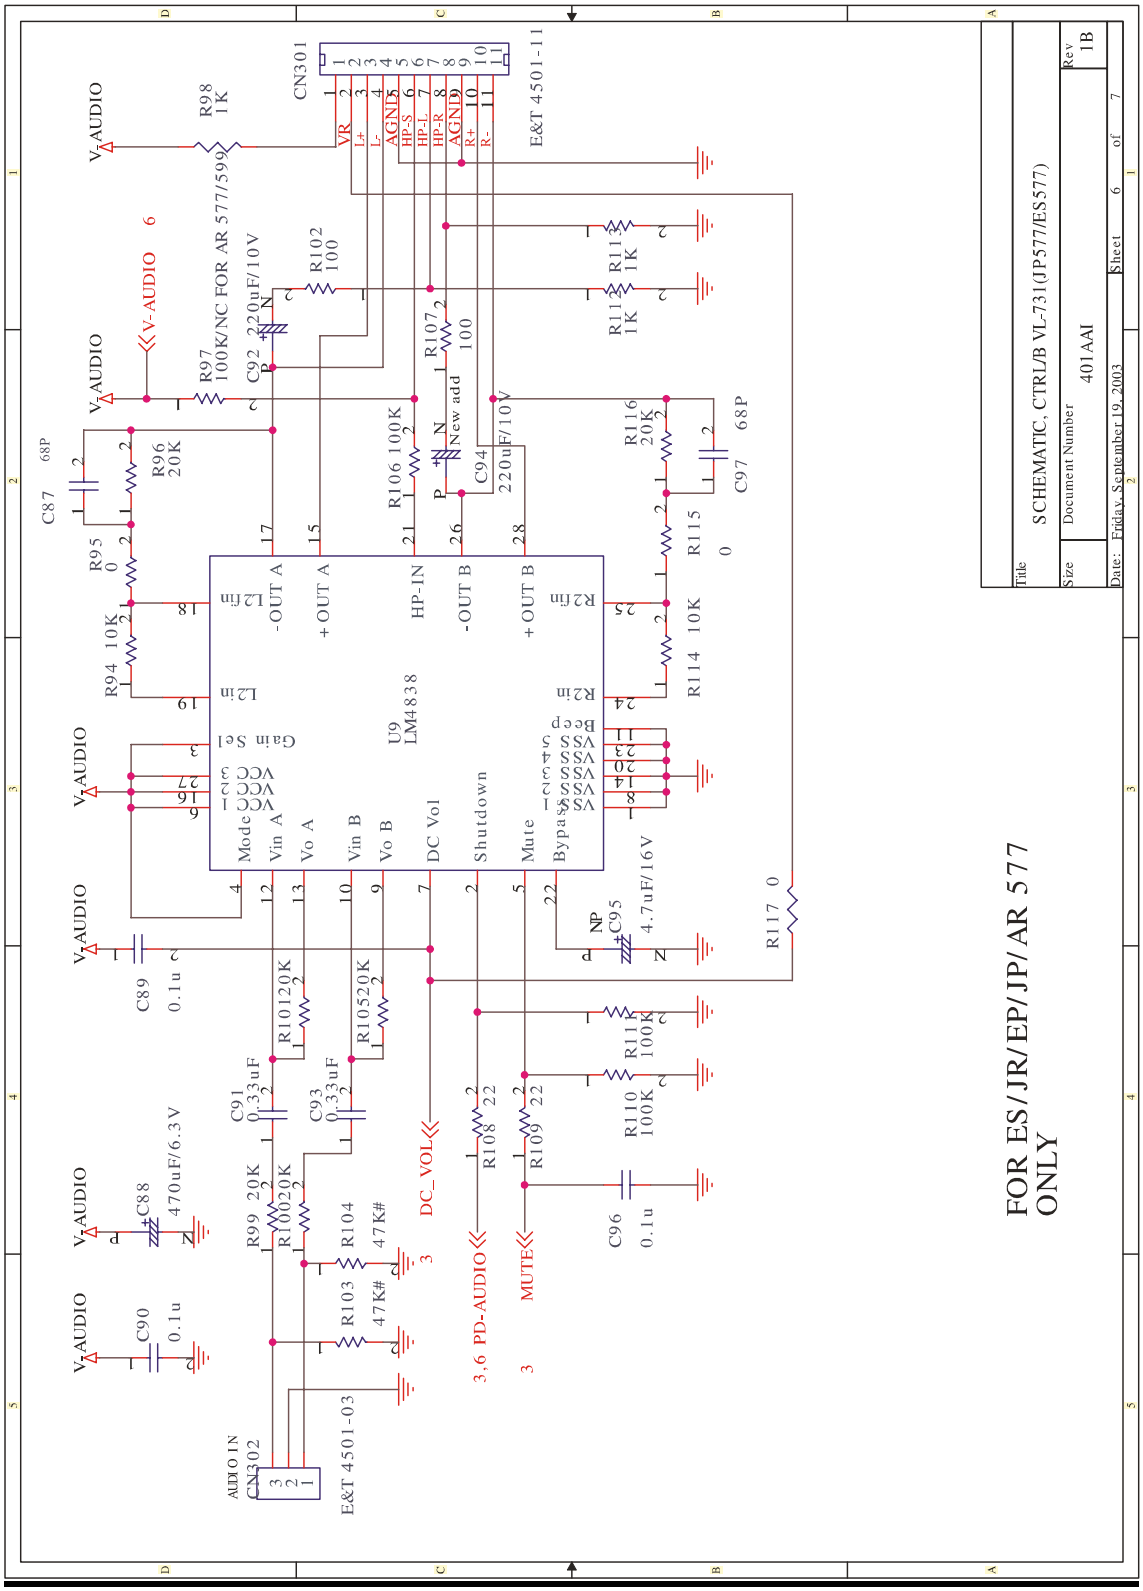
FOR ES/JR/EP/JP/AR 577
ONLY
SCHEMATIC, CTRL/B VL-731(JP577/ES577)
401AAI
Rev 1B
Friday, September 19, 2003
U9 LM4838
CN301
E&T 4501-11
CN302
E&T 4501-03
V-AUDIO
DC_VOL
MUTE
PD-AUDIO

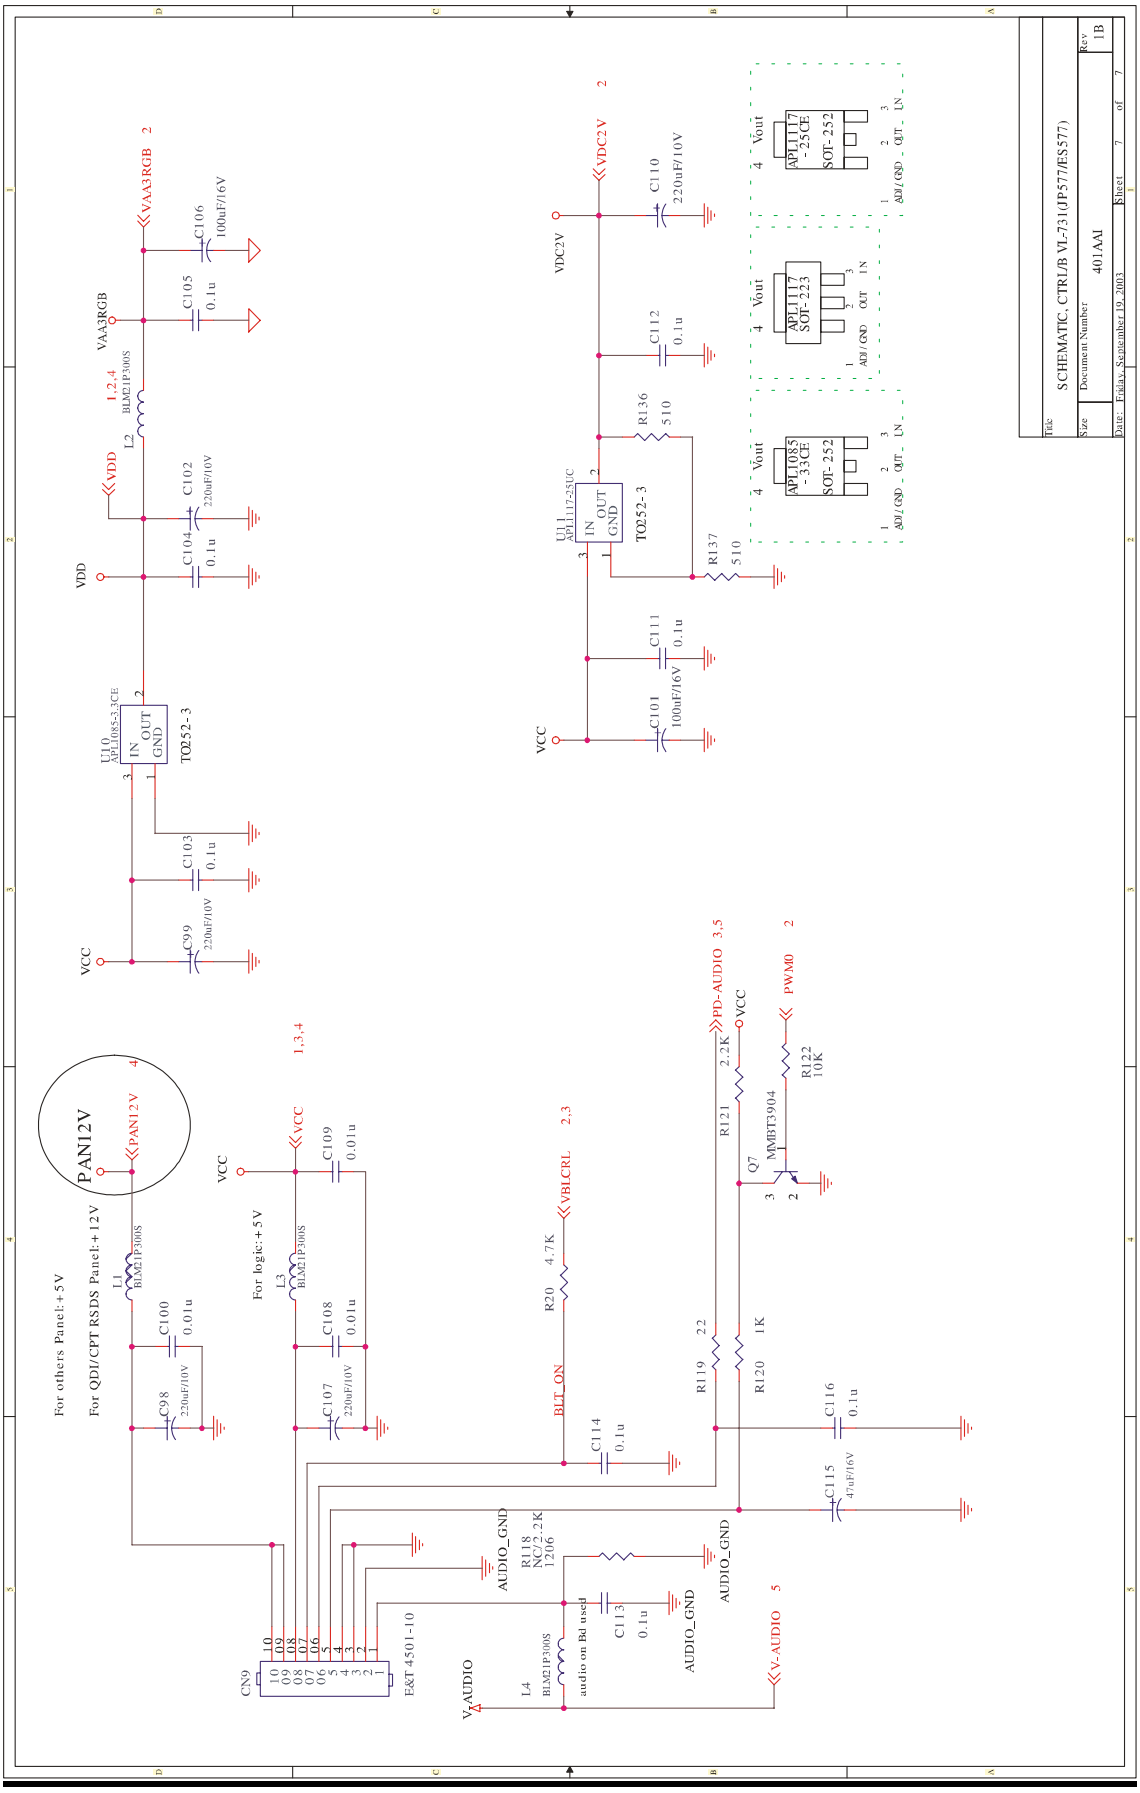
PAN12V
PAN12V
For others Panel:+5V
For QDI/CPT RSDS Panel:+12V
For logic:+5V
VCC
VDD
VAA3RGB
VDC2V
VBLCRL
BLT_ON
PD-AUDIO
PWM0
V-AUDIO
AUDIO_GND
SCHEMATIC, CTRL/B VL-731(JP577/ES577)
401AAI

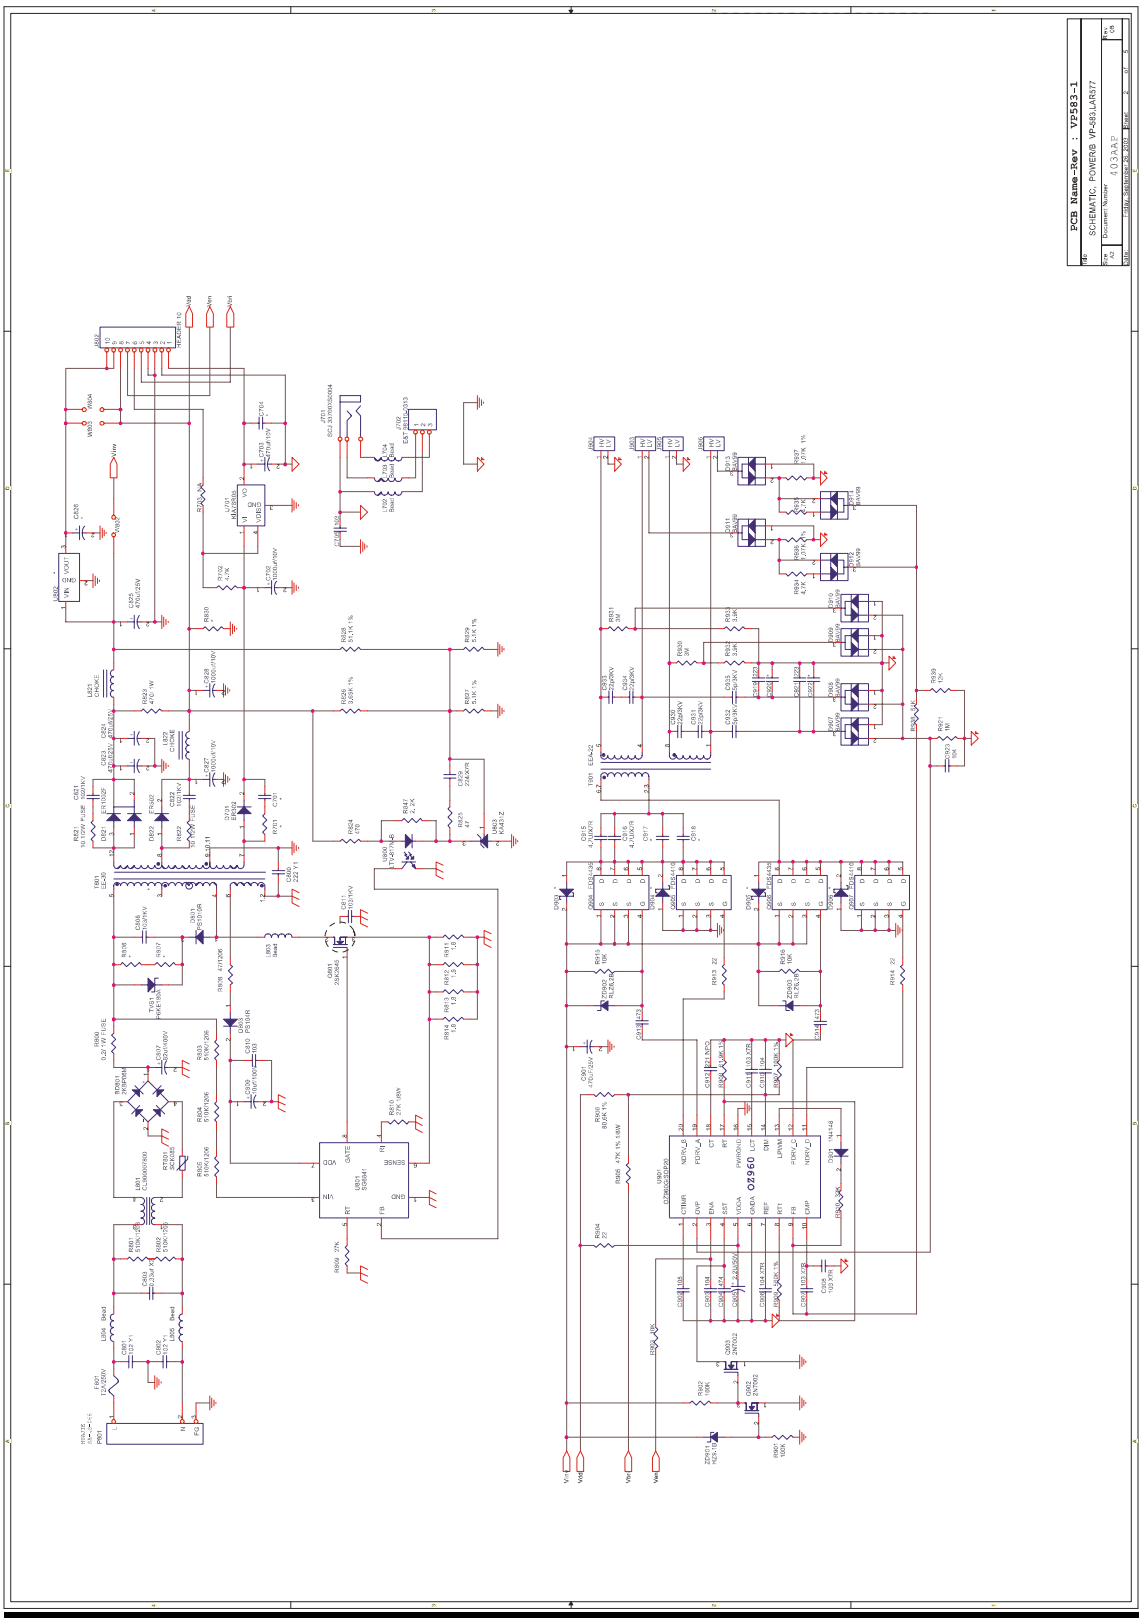
PCB Name-Rev : VP583-1
Title: SCHEMATIC: POWER@ VP-583LARA77
Size: A2
Document Number: 403AA2?
Rev: 08
Date: Friday, September 24, 2010
Time:
02960

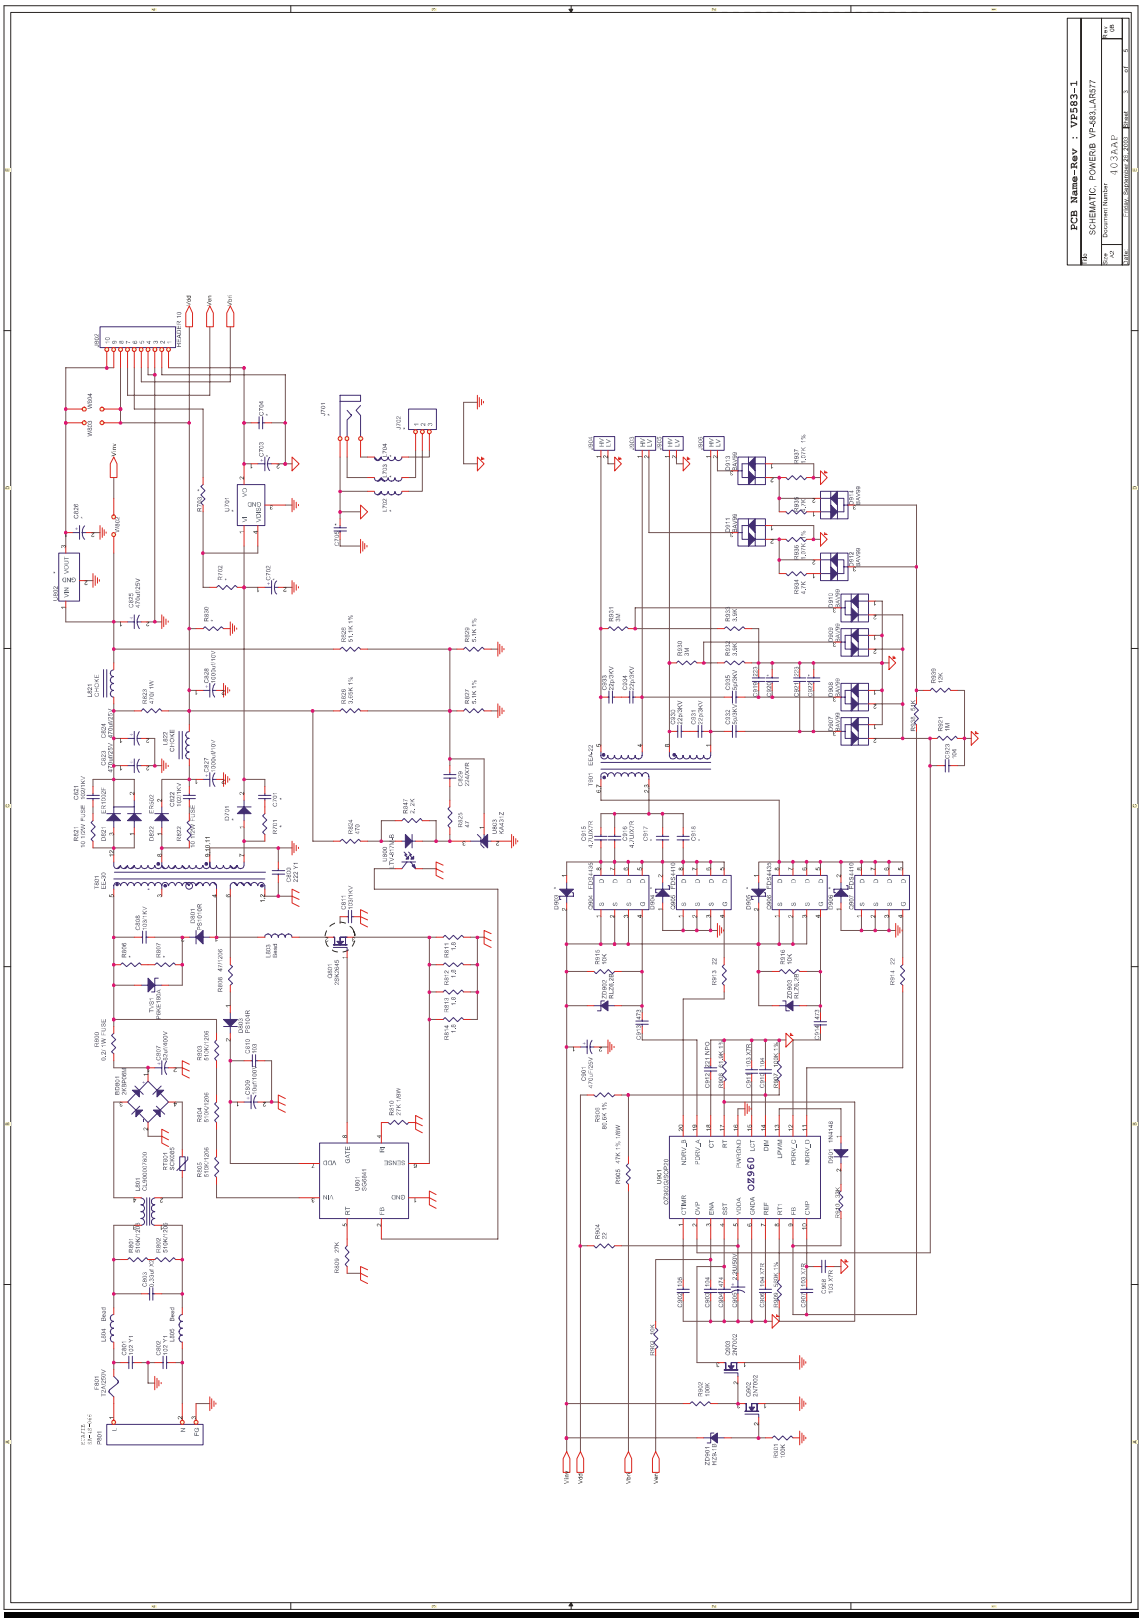
PCB Name-Rev : VP583-1
SCHEMATIC: POWER/B VP-483-LARS77
Document Number 4034AAP
Friday, September 26, 2003
Sheet 3 of 5

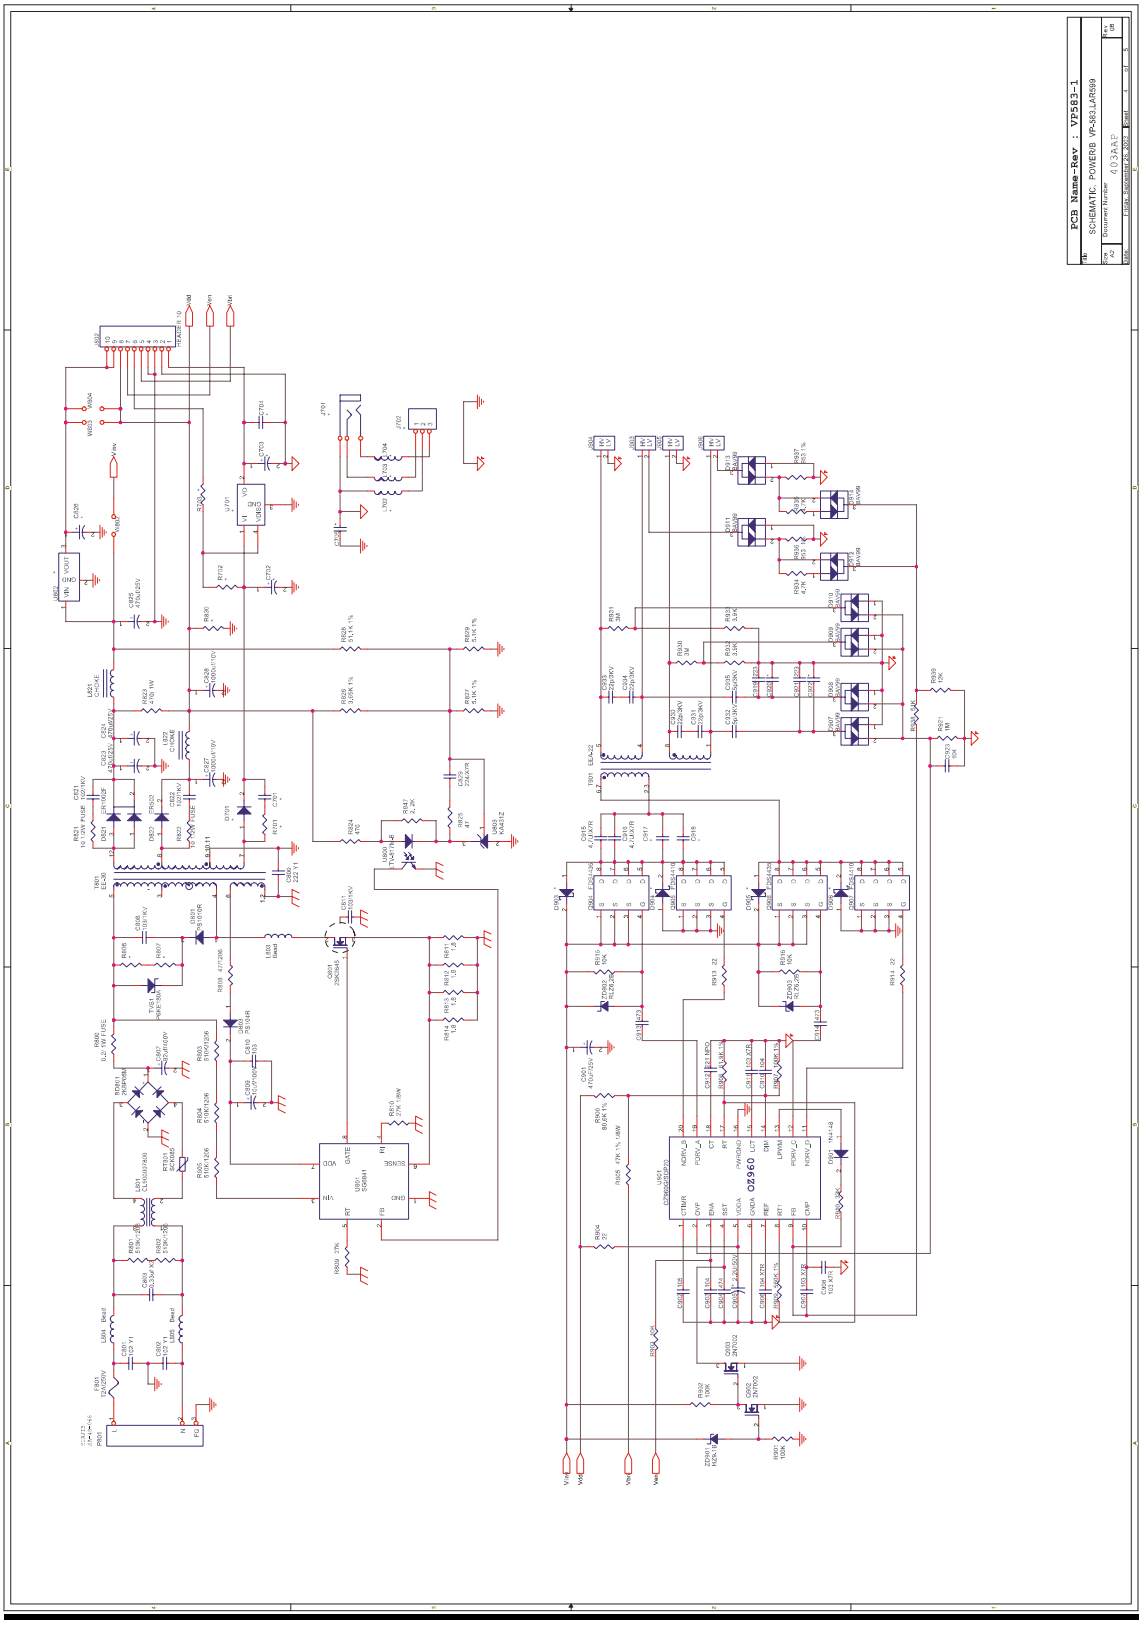
PCB Name-Rev : VP5831
SCHEMATIC: POWERB VP5831LAR999
Document Number 403AAP
Friday, September 26, 2003

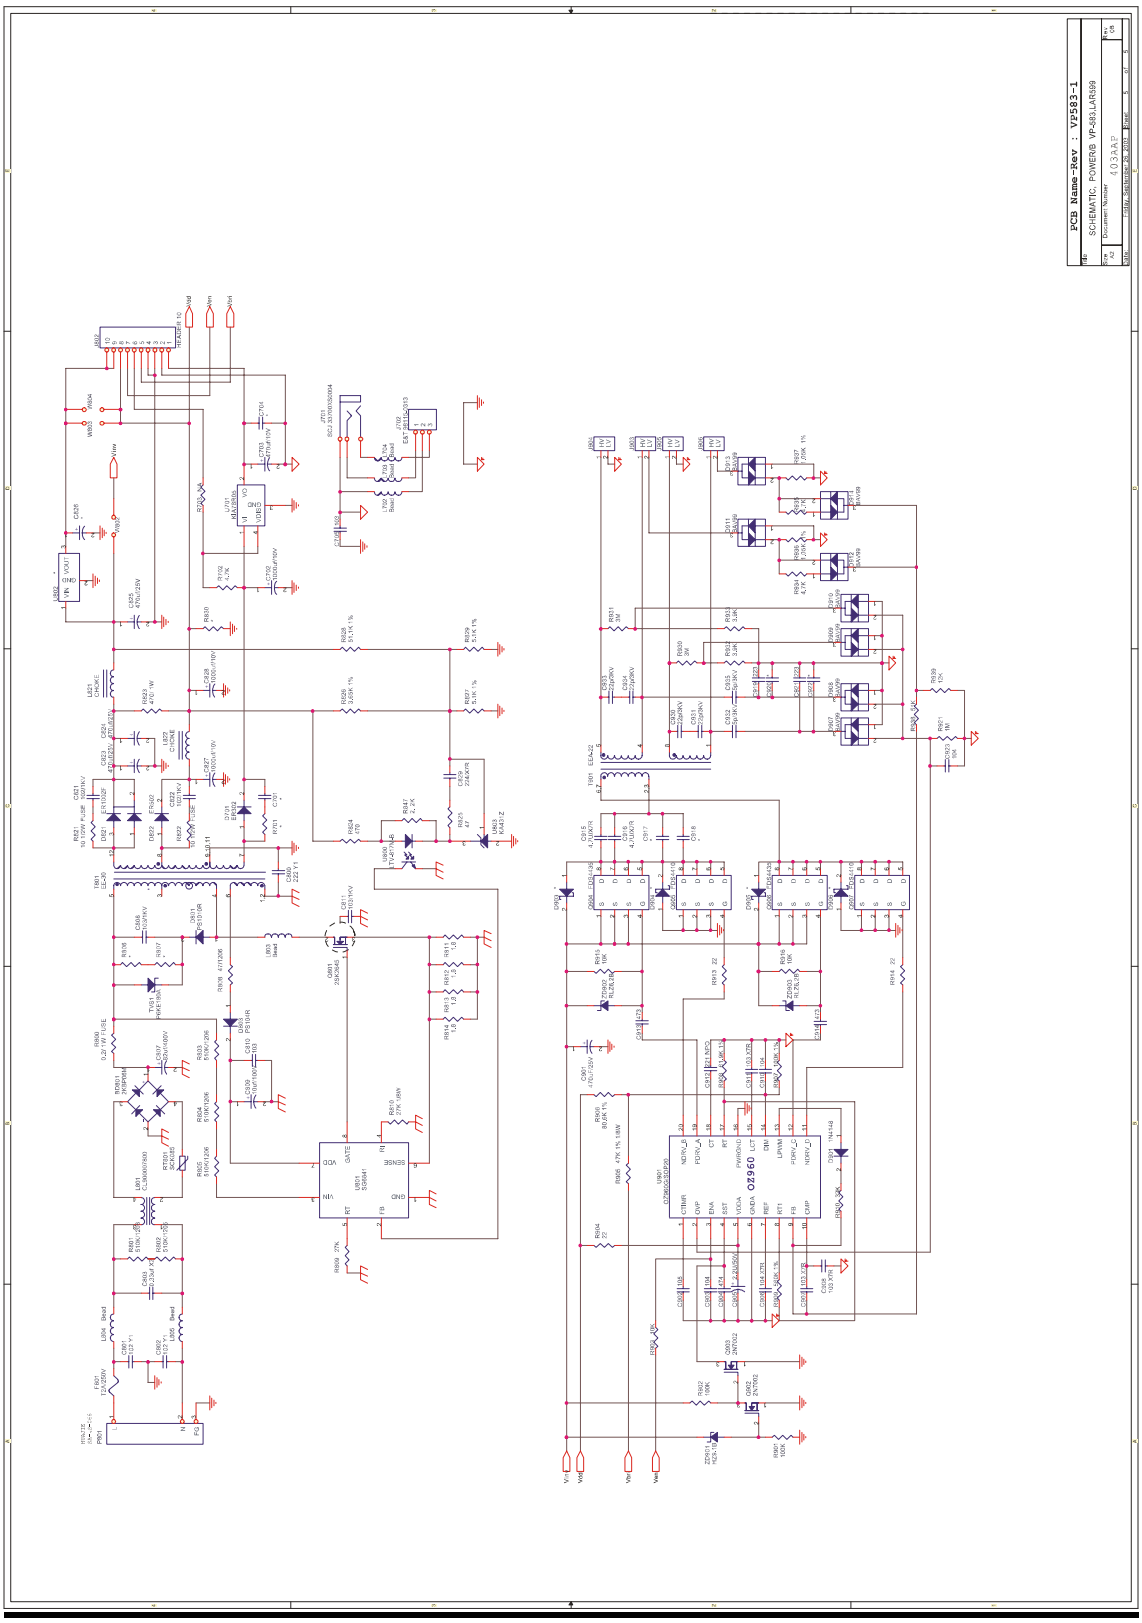
PCB Name-Rev : VP583-1
Title: SCHEMATIC: POWER@ VP-583-LAR699
Size: A2
Document Number: 403AA2?
Rev: 08
Date: Friday, September 24, 2010
Sheet: 5 of 7

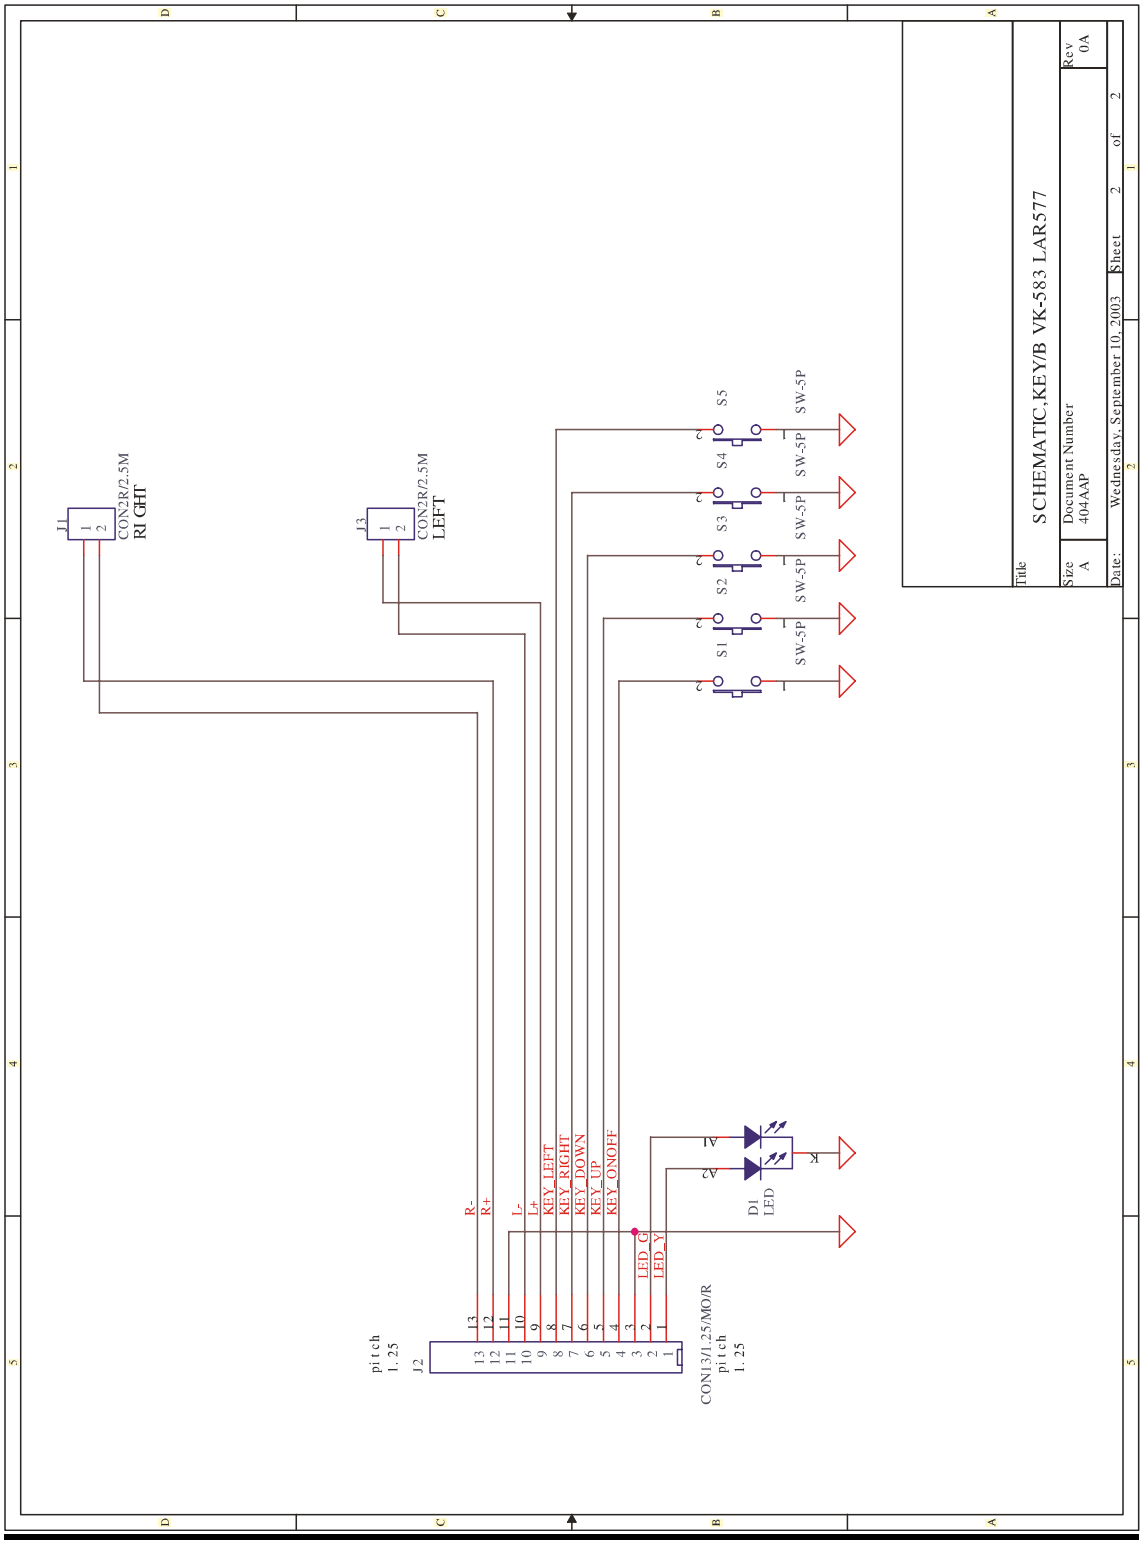
SCHEMATIC,KEY/B VK-583 LAR577
Title
Size
A
Document Number
404AAP
Rev
0A
Date:
Wednesday, September 10, 2003
Sheet
2
of
2
J1
CON2R/2.5M
RI GHT
J3
CON2R/2.5M
LEFT
S5
S4
S3
S2
S1
SW-5P
D1
LED
A1
A2
K
J2
pitch
1.25
CON13/1.25/MO/R
pitch
1.25
R-
R+
L-
L+
KEY_LEFT
KEY_RIGHT
KEY_DOWN
KEY_UP
KEY_ONOFF
LED_G
LED_Y